 


# CONSOLE TURNTABLE INSTRUCTION MANUAL

FEATURING REMOVABLE LEGS  
AND INTEGRATED SPEAKER

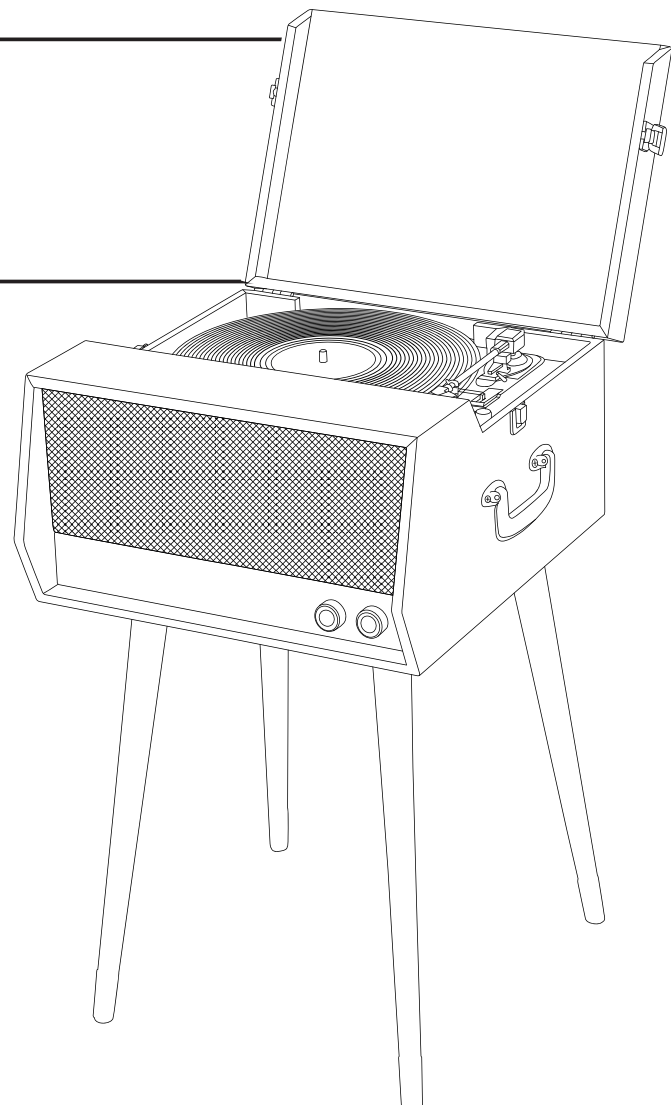

**intempo**<sup>®</sup>  
CLASSIC



Please read all of the instructions carefully and retain for future reference.

## Safety Instructions

When using electrical units, basic safety precautions should always be followed.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this unit, only if they have been given supervision or instruction concerning use of the unit in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the unit.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This unit is not a toy.

This unit contains no user serviceable parts. If the unit and any of its accessories are malfunctioning or it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the unit and adaptor out of reach of children.

Keep the unit and adaptor away from heat or sharp edges that could cause damage.

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquid.

Keep the adaptor away from any parts of the unit that may become hot during use.

Keep the unit free from dust, lint etc.

Do not immerse the unit in water or any other liquid.

Do not operate the unit with wet hands.

Do not operate the unit if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not leave the unit unattended whilst connected to another device.

Do not use the unit for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this unit outdoors.

Do not store the unit in direct sunlight or in high humidity conditions.

Do not put objects into any of the openings.

Do not play music at excessive volume levels as damage to hearing and/or the equipment may occur.

It is imperative to unplug the adaptor after the unit has been used, before it is cleaned and whilst being repaired.

This unit must be placed on a stable, heat-resistant surface.

This unit is intended for domestic use only. It should not be used for commercial purposes.



To prevent possible hearing damage, do not listen at high volume levels for long periods of time.

**Warning:** Keep the unit away from flammable materials.

UP Global Sourcing UK Ltd. Hereby declares that this unit is in compliance with the essential requirements and other provisions of directive 1999/5/EC.

## Getting Started

Remove the unit from the box.

Remove any packaging from the unit.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

Console Turntable

4 legs

Power Adaptor

RCA Cable

Instruction Manual

## Features

Bluetooth Version: 2.1

Wireless Range: 10 m

Speaker Output: 2 x 5 W

 
 
 
Power Supply: 5 V 2 A DC

45 rpm Adaptor (Included)

RCA Line Output

## Description of Parts

1. Turntable
2. 45 rpm Adaptor
3. Tone Arm
4. Stylus
5. Arm Lock
6. Armrest
7. Arm Raising Lever
8. Speed Selector
9. Bluetooth/Turntable Selector Switch
10. Charge Indicator Light
11. Bluetooth Indicator Light
12. Power Indicator Light
13. On/Off Volume Dial
14. RCA Line Output
15. DC Input Jack
16. Decorative Dials
17. Built-in Speakers

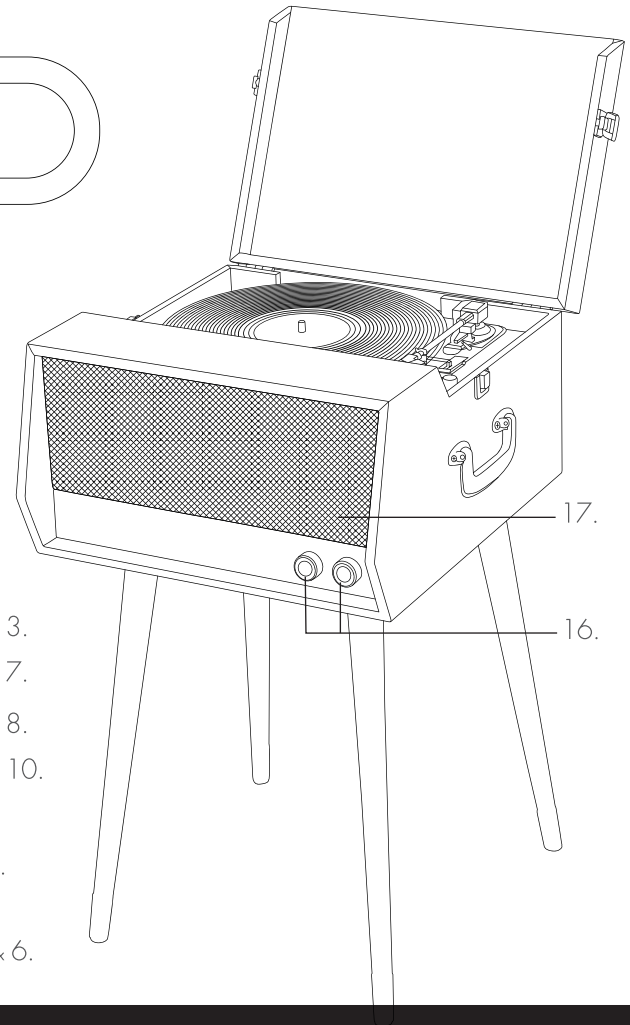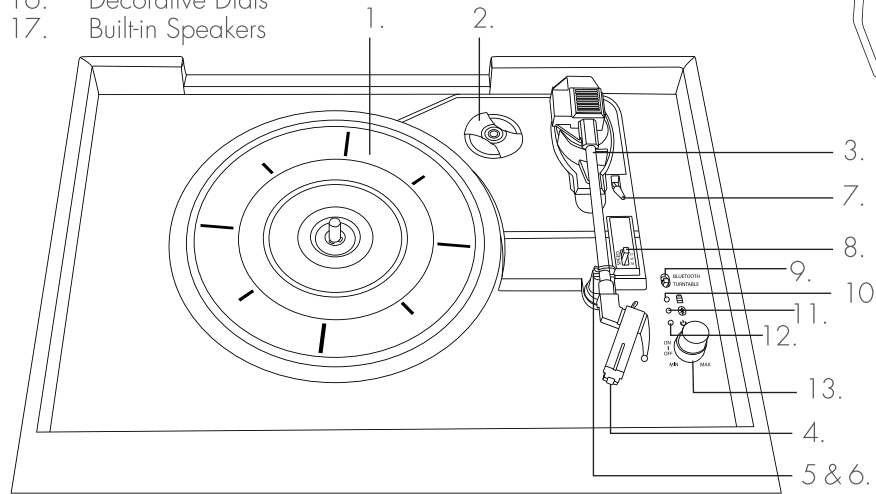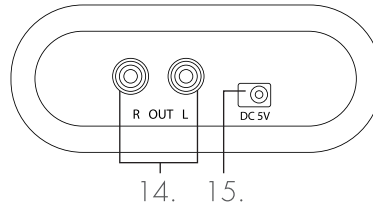

## Instructions for Use

### Assembly

Carefully turn the Console Turntable over so that the lid is resting on the floor; place it onto a soft surface to protect it from scratches. Screw the four legs onto the underside of the Console Turntable. Stand the Console Turntable on a flat, stable surface.

### Using the Console Turntable

#### Basic Functionality

Turn on the Console Turntable by rotating the 'On/Off Volume Dial' in a clockwise direction. The power indicator light will illuminate red to signal that the Console Turntable has powered on.

The 'On/Off Volume Dial' will also adjust the volume of the Console Turntable. Turn it in a clockwise direction to increase the volume. Decrease the volume by twisting it in an anticlockwise direction.

Choose either the 'Turntable' or 'Bluetooth' mode using the 'Mode Selection Switch' (see below sections entitled 'Listening to a Vinyl Record' or 'Bluetooth Mode').

Rotate the 'On/Off Volume Dial' in an anticlockwise direction until it clicks, to turn off the Console Turntable.

 
**Warning:** The dials on the front of the Console Turntable are for decorative purpose only and are not operational. Do not attempt to turn them, as this will damage the Console Turntable.

## Modes

Ensure that the Console Turntable is turned on before using any of the following modes.

### Turntable Mode

#### Listening to a Vinyl Record

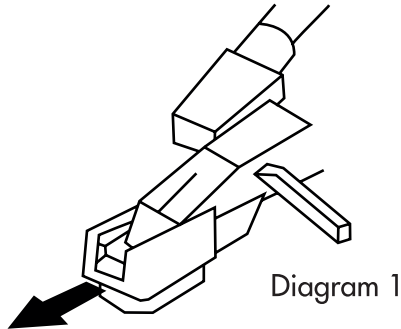

**STEP 1:** Turn on the Console Turntable by rotating the 'On/Off Volume Dial' in a clockwise direction.

**STEP 2:** Select the Turntable mode using the 'Mode Selection Switch'.

**STEP 3:** Remove the protective white needle cover from the stylus by gently sliding it away from the tone arm (Diagram 1).

**STEP 4:** Carefully place a record onto the turntable, remembering to apply the 45 rpm adaptor first, if listening to a 45 rpm record with a large centre hole.

**STEP 5:** Use the speed selector to choose the correct speed setting for the record to be played.

**STEP 6:** Unlock the tone arm from the arm lock by pushing it aside.

**STEP 7:** Raise the tone arm using the arm raising lever or by carefully lifting it.

**STEP 8:** Move the tone arm across to the outer edge of the record and gently lower it; the turntable will begin to spin and play automatically.

**STEP 9:** Once the tone arm reaches the end of the record at the centre of the turntable, the turntable will stop. Lift away the tone arm and place it back into the armrest.

**STEP 10:** Secure the tone arm once more by engaging the arm lock.

**STEP 11:** Rotate the 'On/Off Volume Dial' in an anticlockwise direction until it clicks, to turn off the Console Turntable.

**Note:** Always ensure that the tone arm is secured before transporting.

## Bluetooth Mode

Using the Bluetooth mode allows sound from a Bluetooth compatible device to be played wirelessly through the Console Turntable. To use the Bluetooth mode, the Bluetooth compatible device must first be paired with the Console Turntable.

### Pairing with a Bluetooth Compatible Device

**STEP 1:** Turn on the Console Turntable by rotating the 'On/Off Volume Dial' in a clockwise direction.

**STEP 2:** Select the Bluetooth mode using the 'Mode Selection Switch'. The Bluetooth indicator light will flash blue, signalling that the Console Turntable is ready to be paired with a Bluetooth compatible device.

**STEP 3:** Search for the Console Turntable using a Bluetooth compatible device. Select 'EE1425' to connect and pair to the Console Turntable.

**STEP 4:** Once a connection has been made, the Bluetooth indicator light will remain solid to signal that the Console Turntable is now paired with the Bluetooth compatible device.

### Listening via a Bluetooth Compatible Device

Once the Bluetooth compatible device has been paired with the Console Turntable, sound can be controlled using either the Console Turntable or the relevant controls on the Bluetooth compatible device.

### Connecting an External Amplifier

**STEP 1:** Insert an RCA line cable into the RCA line output jacks, ensuring that each plug is correctly inserted according to the corresponding colour (red and white).

**STEP 2:** Plug the opposite ends of the RCA line cable into a suitable external amplifier. Music played through the Console Turntable will now emit from the external amplifier in addition to the built-in speakers.

### Listening via an External Amplifier

 
Once the suitable external amplifier has been connected to the Console Turntable, sound can be controlled using the relevant controls on the suitable external amplifier.



## Replacing the Console Turntable Stylus

The Console Turntable stylus should last approximately 50 hours under normal use. However, it is recommended that the stylus be replaced as soon as a change in sound quality is noticed. Prolonged use of a worn-out stylus may damage any records and the highest speed 78 rpm records will wear out the stylus more quickly.


### Removing the Old Stylus

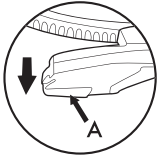

**STEP 1:** Carefully place a screwdriver at the tip of the stylus and push downward (A).

**STEP 2:** Remove the old stylus by gently pulling it down and forward simultaneously.

### Installing a New Stylus

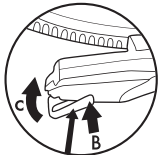 

Guide pins  
(inside)

**STEP 1:** Hold the stylus at the front edge (needle side) and insert the rear edge onto the tone arm (B)

**STEP 2:** Push the stylus upward until it locks into position (C).

**Caution:** Ensure that the Console Turntable is powered off using the 'On/Off Volume Dial' before replacing the stylus. Do not bend the stylus or touch the needle, as this may cause injury.

## Care and Maintenance

### Handling Vinyl Records

Only handle vinyl records with clean hands by holding them using the edge. Touching the surface of a vinyl record will cause the playing quality to deteriorate. Avoid touching the grooves in any vinyl record.

To clean a vinyl record, use a soft, anti-static cloth to gently wipe the surface.

Store vinyl records in the protective sleeve when not in use.

Always store vinyl records upright on the edge.

Avoid placing vinyl records in direct sunlight, close to any heat source (radiators, stoves, etc.) or in a location that may be subject to vibration, excessive dust, heat, cold or moisture.

### Cleaning the Console Turntable

Wipe the Console Turntable with a soft, dry, lint-free cloth.

Do not immerse the Console Turntable in water or any other liquid.

Do not expose the Console Turntable to liquid, moisture or humidity to avoid the unit's internal circuit being affected.

Do not use any abrasive cleaning solvents to clean the Console Turntable, as this can cause damage.

Do not expose the Console Turntable to sharp objects, which may cause damage.

Do not expose the Console Turntable to extremely high or low temperatures as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.

Do not drop the Console Turntable, as the internal circuit may become damaged.

Do not attempt to disassemble the Console Turntable, as this may cause damage to the unit.

Do not dispose of the Console Turntable in a fire, as it will result in an explosion.

### Specifications

Product Code: EE1425

Speaker Output: 2 x 5 W

Bluetooth Version 2.1

Wireless Range: 10 m

Frequency Response: 100 Hz–10 kHz

**UP GLOBAL SOURCING,  
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: [customercare@upgs.com](mailto:customercare@upgs.com)

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

### **Guarantee**

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects. This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse.

Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this products excludes, restricts or otherwise affects your statutory rights. In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

intempo<sup>®</sup>



Distributed by: UP Global Sourcing, Victoria Street, Manchester OL9 0DD. UK.

[www.intempo.com](http://www.intempo.com)

MADE IN CHINA.

CD200716/MD000000/V1