 


BLUETOOTH XL JUKEBOX WITH CD PLAYER

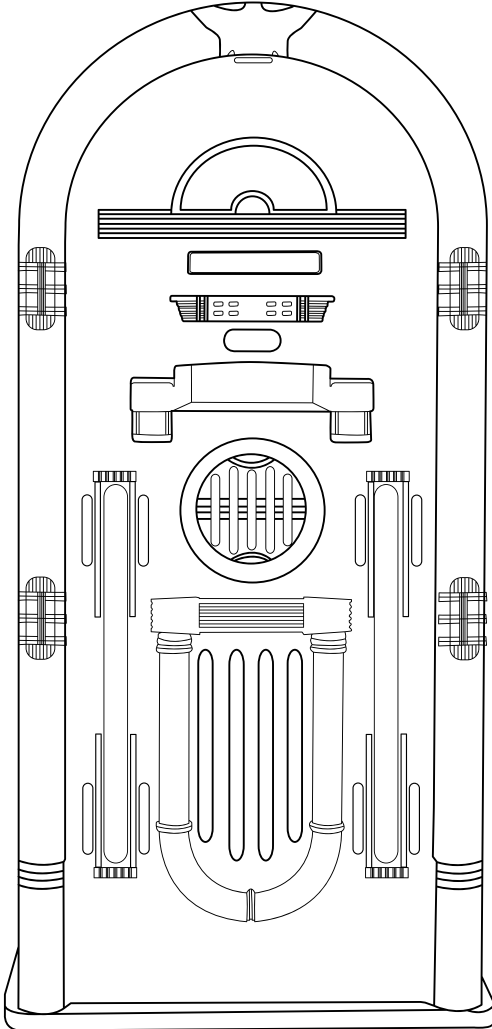

intempo[®]
Making Music Cool

INSTRUCTION MANUAL



GB Please read all of the instructions before use and retain for future reference.

Safety Instructions

When using electrical units, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the unit to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this unit, only if they have been given supervision or instruction concerning use of the unit in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the unit.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This unit is not a toy.

This unit contains no user serviceable parts. If the unit and any of its accessories are malfunctioning or it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the unit and adaptor out of reach of children.

Keep the unit and adaptor away from heat or sharp edges that could cause damage.

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquid.

Keep the adaptor away from any parts of the unit that may become hot during use.

Keep the unit free from dust, lint etc.

Do not immerse the unit in water or any other liquid.

Do not operate the unit with wet hands.

Do not operate the unit if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not leave the unit unattended whilst connected to another device.

Do not leave the unit unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the unit for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this unit outdoors.

Do not store the unit in direct sunlight or in high humidity conditions.

Do not move the unit whilst it is in use.

Do not put objects into any of the openings.

Do not play music at excessive volume levels as damage to hearing and/or the equipment may occur.

It is imperative to unplug the power cord after the unit has been used, before it is cleaned and whilst being repaired.

This unit must be placed on a stable, heat-resistant surface.

This unit is intended for domestic use only. It should not be used for commercial purposes.

 To prevent possible hearing damage, do not listen at high volume levels for long periods of time.

Warning: Keep the unit away from flammable materials.

Caution



This unit utilises a laser.

The use of optical instruments with this unit will increase eye hazard, as the laser used in the CD player is harmful to eyes.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Do not attempt to disassemble or repair the unit; refer servicing to qualified personnel only.

This unit is classified as a class 1 laser product.

The class 1 laser product marking is located on the laser protective housing inside the enclosure.

CLASS 1 LASER PRODUCT

CAUTION
- CLASS 1 LASER
RADIATION WHEN OPEN.
DO NOT VIEW DIRECTLY
WITH OPTICAL
INSTRUMENTS

Battery Safety (Remote Control Only)

Ensure that the battery compartment is secure.

Only a battery of the same or equivalent type as those recommended should be used with this unit.

Only use those batteries recommended.

Batteries are to be inserted with the correct polarity and should not be exposed to excessive heat sources such as fire and direct sunlight.

Replace a full set of batteries at any one time.

Remove any batteries from the unit when it is not being used for a long period of time to avoid leakage.

Exhausted batteries should be removed from the unit to avoid leakage.

In the event of the battery leaking, do not allow any liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of reach of children.

Remember to keep button cell batteries away from children at all times as they can easily be swallowed.

The supply terminals are not to be short-circuited.

Exhausted batteries must be removed and disposed of safely.

Do not dispose of batteries in a fire.

Do not crush, puncture, dismantle or otherwise damage the batteries.

Do not mix old and new batteries.

Do not expose batteries to heat or fire as they may explode.

Do not subject the battery (batteries) to mechanical shock.

Do not dispose of the battery in your household waste.

To dispose of the battery, take it to your local recycling station. Contact your local government offices for details.

This unit requires 1 x 3 V CR2025 button cell battery (included).

UP Global Sourcing UK Ltd. hereby declares that this unit is in compliance with the essential requirements and other provisions of directive 1999/5/EC.

Getting Started

Remove the unit from the box.

Remove any packaging from the unit.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Bluetooth XL Jukebox with CD Player

Power Adaptor

Line-in Aux. Cable

Remote Control

Instruction Manual

Features

Bluetooth Connectivity 2.1 + EDR

Wireless Range: 10 m

Speaker Output: 50 W

Power Supply: 18 V

Colour Changing LED Lights

Power Adaptor (Included)

 
 
 
 
Line-in Aux. Cable (Included)

Remote Control (Included)

Description of Parts


For the Jukebox

1. CD Player
2. Disk Tray (Inside CD Player)
3. LED Display
4. Remote Sensor
5. On/Off Switch
6. 18 V 3 A DC Input Jack
7. Aux. 2 Input Jacks
8. Aux. 1 Input Jack
9. Standby Indicator Light
10. Standby Button
11. Play/Pause Button
12. Stop Button
13. Program/Repeat Button
14. Function Button
15. Skip/Volume - Button
16. Skip/Volume + Button
17. Eject Button
18. Remote Control Storage Pocket

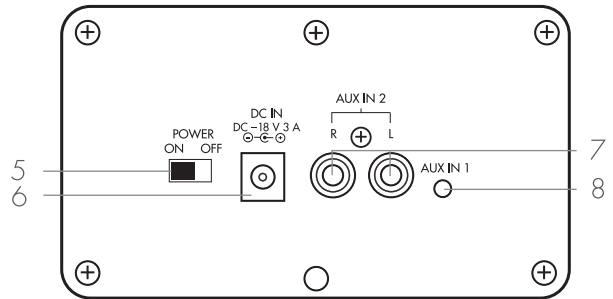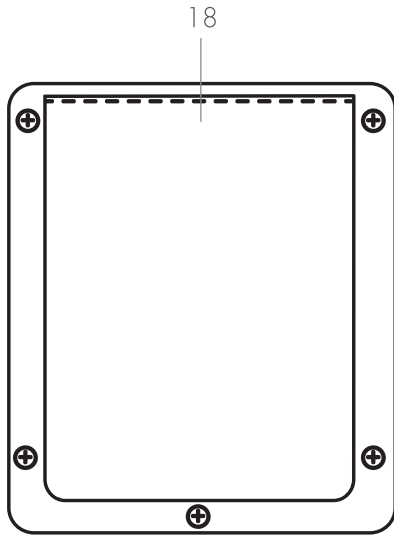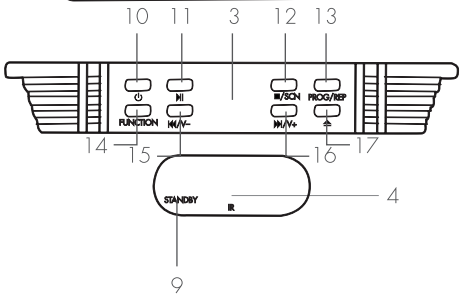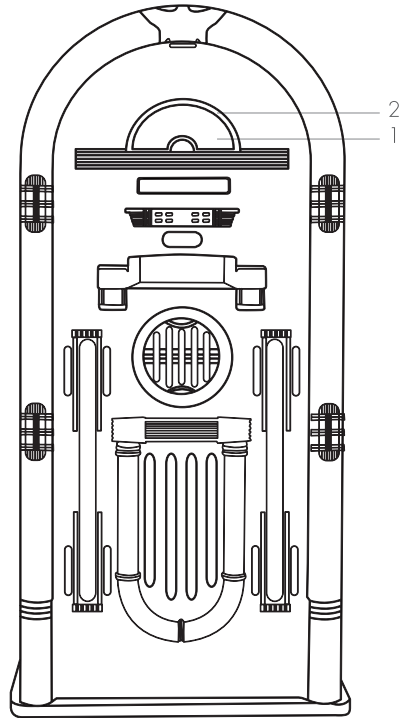

For the Remote Control

 1. Standby Button
2. Source Button
3. Mute Button
4. LED On/Off Button
5. Skip - Button
6. Play/Pause Button
7. Skip + Button
8. Program/Repeat Button
9. Stop Button
10. Eject Button
11. Bass + Button
12. Bass - Button
13. Volume + Button
14. Volume - Button
15. Treble + Button
16. Treble - Button

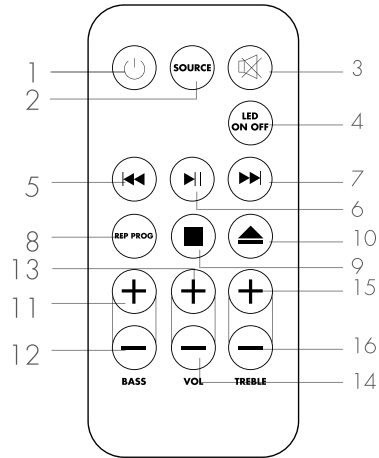

Instruction for Use

Using the Bluetooth XL Jukebox

Plug the DC input jack on the power adaptor into the DC input socket on the reverse of the Bluetooth XL Jukebox and then plug the adaptor into the mains power supply.

Turn on the Bluetooth XL Jukebox by sliding the 'On/Off' switch to 'On'.

Use the 'Source' button on the remote control to change between the Bluetooth, CD and Aux. functions.

Adjust the volume by pressing and holding the 'Skip/Volume +' and 'Skip/Volume -' buttons on the control panel or use the corresponding buttons on the remote control.

Instantly cease all sound emitted from the Bluetooth XL Jukebox by pressing the 'Mute' button on the remote control; push it again to resume the sound.

To pause the track, press the 'Play/Pause' button on the control panel or remote control; push it once more to resume playing the track.

Skip tracks by pressing the 'Skip/Volume +' and 'Skip/Volume -' buttons on the control panel or use the corresponding buttons on the remote control.

To turn the LED lights on and off, use the 'LED On/Off' button on the remote control.

Set the Bluetooth XL Jukebox to standby by pressing 'Standby' button on the control panel or remote control.

To turn off the Bluetooth XL Jukebox completely, slide the 'On/Off' switch on the reverse of the unit to 'Off'.

Modes

CD Mode

Inserting a CD

STEP 1: Press the 'Eject' button on the control panel or remote control to open the CD player.

STEP 2: Insert the CD to be played with the artwork facing up. Gently press the CD into the disk tray and then close the CD player.

STEP 3: Press the 'Source' button on the remote control until the LED display shows '- -'; this will then go on to display the track number, for example '01'. If no CD is inserted, the LED display will show 'no'.

Warning: The CD player utilises a class 1 laser. Always exit CD mode before opening the CD player to remove or change CDs. Never look directly at the laser pickup head.

Listening to a CD

1. Pause a track by pressing the 'Play/Pause' button on the control panel or remote control; push it again to resume the track.
2. Skip tracks by pressing the 'Skip/Volume +' and 'Skip/Volume -' buttons on the control panel or use the corresponding buttons on the remote control.
3. To repeat the current track, press the 'Program/Repeat' button on the control panel or remote control; a red dot will flash to the right of track number shown on the LED display.
4. Repeat the entire CD by pressing the 'Program/Repeat' button a second time; the red dot next to the track number will remain solid.
5. Cancel the repeat function by pressing the 'Program/Repeat' button once more.
6. To end CD playback, press the 'Stop' button on the control panel or remote control.

Note: The LED display will show the track number once a CD is playing. When a track is paused, the track number shown on the LED display will flash.

Programming a Playlist

STEP 1: End CD playback by pressing the 'Stop' button.

STEP 2: Press and hold the 'Program/Repeat' button on the control panel or remote control; the LED display will flash '01', signalling that a playlist can now be programmed.

STEP 3: Use the 'Skip/Volume +' and 'Skip/Volume -' buttons on the control panel or the 'Skip +' and 'Skip -' buttons on the remote control to select a track and then press the 'Program/Repeat' button to select it as the first to be played. The LED display will now flash '02'.

STEP 4: Repeat step 3 to set the play order of up to 20 tracks.

STEP 5: Press the 'Play/Pause' button on the control panel or remote control to begin playback of the new playlist.

STEP 6: Tracks can be skipped by pressing the 'Skip/Volume +' and 'Skip/Volume -' buttons on the control panel or by using the corresponding buttons on the remote control.

STEP 7: Cancel programming by pressing the 'Stop' button.

Note: During programming, a red dot will illuminate to the left of the track number shown on the LED display.

Bluetooth

The Bluetooth XL Jukebox will automatically enter the Bluetooth mode when it is turned on and the LED display will flash 'bt'.

STEP 1: Pair the Bluetooth enabled device with the Bluetooth XL Jukebox by selecting 'EE1446' from the listed devices. Once a connection has been made, the LED display will show 'bt', to signal that the Bluetooth XL Jukebox is now paired with the Bluetooth compatible device.

STEP 2: Tracks can be played and skipped using either the Bluetooth enabled device, the control panel on the Bluetooth XL Jukebox or the remote control.

STEP 3: To unpair from the currently connected device, unpair through the device's settings. Alternatively, change modes by pressing the 'Source' button on the control panel or remote control.

Aux. 1

Connect the 3.5 mm cable to the Aux. input jack on the back of the Bluetooth XL Jukebox and the other end to an MP3 player or other compatible audio source. The Bluetooth XL Jukebox will automatically switch to the Aux. mode and the LED display will show 'AU'. Sound can be controlled using the connected device.

Aux. 2

Connect an RCA cable (not included) to the Aux. 2 input jacks on the back of the Bluetooth XL Jukebox and the other end to an audio output device. The Bluetooth XL Jukebox will automatically switch to the Aux. mode and the LED display will show 'A.U'. Sound can be controlled using the connected device.

LED Lights

To turn on and activate the LED lights, press the 'LED On/Off' button on the remote control; press it again to turn off and deactivate the LED lights.

Using the Remote Control

When using the remote control for the first time, remove the clear plastic tab from the rear of the remote control and discard. To open the battery compartment, slide the tab to the right and pull the tray out. Insert or replace the exhausted battery with a CR2025 battery, observing the polarity markings and then close the tray.

Care and Maintenance

Before attempting any cleaning or maintenance, ensure that the Bluetooth XL Jukebox is turned off at the mains power supply and has been unplugged.

Wipe down the Bluetooth XL Jukebox with a soft, damp cloth and dry thoroughly.

Do not:

Use abrasive cleaning solvents to clean the Bluetooth XL Jukebox.

Immerse the Bluetooth XL Jukebox in water or any other liquid.

Expose the remote control to extremely high or low temperatures, as this may destroy the battery.

Specifications

Product Code: EE1446

Power Source: 18 V, 3 A

Remote Control Battery: 1 x 3 V CR2025

Output: 50 W

CD: Class 1 Laser

CD Player: CD-R/CD-RW

Troubleshooting

Problem	Cause	Solution
No Power	The power adaptor has not been plugged in properly. The Bluetooth XL Jukebox has not been switched on at the mains power supply. The Bluetooth XL Jukebox is in standby mode.	Ensure that the power adaptor has been properly connected. Switch on the Bluetooth XL Jukebox at the mains power supply. Press the 'Standby' button on the remote control.
No Sound	The volume level is set too low.	Check that the volume level is set at an audible level and adjust accordingly with the remote control, control panel or paired Bluetooth device.
Unable to pair a device with the Bluetooth XL Jukebox.	The Bluetooth device is not compatible with the Bluetooth XL Jukebox. The Bluetooth XL Jukebox has not been set to the correct source mode.	Ensure that the Bluetooth device is compatible with the Bluetooth XL Jukebox and that the Bluetooth function on the device is switched on. Press the 'Source' button on the remote control until the LED display flashes 'bt', then search for 'EE1446' and select to pair.
The CD is skipping/ will not play.	The CD is dirty/scratched.	Gently clean the CD in small, circular motions with a non-static cloth, working from the inside out.
The remote control is not working.	The batteries are exhausted.	Replace the battery with a 3 V CR2025.

**UP GLOBAL SOURCING,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical Defects. This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse.

Under this guarantee we undertake to repair or replace free of charge any parts found to be defective. Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this products excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice.

Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

intempo[®]



Distributed by: UP Global Sourcing, Victoria Street, Manchester OL9 0DD. UK.

www.intempo.com

MADE IN CHINA.

CD310516/MD000000/V1



GLOBAL SOURCING
THE ULTIMATE WAY

Manchester
OL9 0DD
United Kingdom
www.upgs.com


t: +44 (0) 161 627 1400

f: +44 (0) 161 628 2126

hk: +852 6681 9752

cn: +86 1 3417586804

Artworker:	Rachel Hart
Date:	02/06/16
Project Name:	EEV160758 UPG EE1446
Type of Artwork:	Instruction Manual
Size:	A5 12 PP
Software Used:	Indesign CS6
Typefaces:	Futura

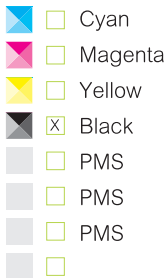 

Artwork Version 2

Artwork Scale 1:1

©2016 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE
ARTWORK REFERENCE ONLY