 
 


# WDS19 SLIMLINE HEADPHONES

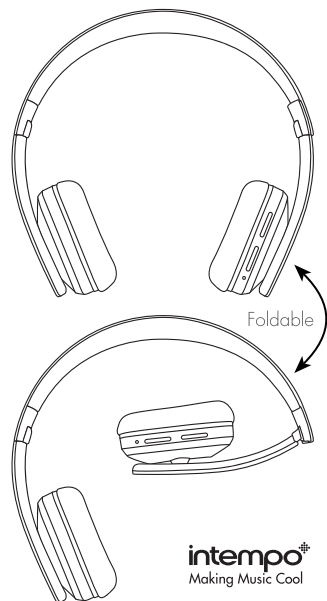


INSTRUCTION MANUAL

## Description of Parts

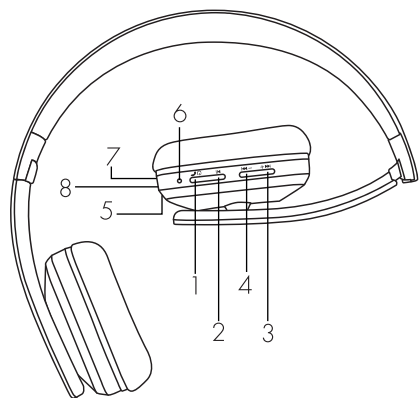

1. Power/Call Button (⏻)
2. Play/Pause Button (⏮)
3. Volume +/Skip - Button (⏮ V+)
4. Volume -/Skip + Button (V+ ⏮)
5. LED Indicator Light
6. Hands-free Microphone

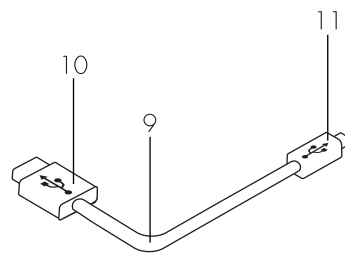

7. Micro USB Charging Port
8. Aux. Input Port
9. USB Charging Cable
10. USB Connector
11. Micro USB Connector

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not operate the product if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the product.

Do not leave the product unattended whilst connected to another device.

Do not use the product for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not store the product in direct sunlight or in high humidity conditions.

Do not play music at excessive volume levels as damage to hearing and/or the equipment may occur.

This product is intended for domestic

use only. It should not be used for commercial purposes.



To prevent possible hearing damage, do not listen at high volume levels for long periods of time.

**Warning:** Keep the product away from flammable materials.

### Battery Safety

The battery unit should not be placed near excessive heat sources, such as fire.

The supply terminals are not to be short-circuited.

If the battery pack becomes exhausted, it should be removed to avoid leakage.

In the event of the battery unit leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts

of water and seek medical advice. Keep the battery unit out of the reach of children.

Avoid storing in direct sunlight.

Do not dispose of the battery unit in a fire.

Do not crush, puncture, dismantle or otherwise damage the battery unit.

Do not store above 60 °C.

Do not expose battery unit to heat or fire as they may explode.

Do not subject the battery unit to mechanical shock.

Do not dispose of the exhausted battery unit in household waste.

To dispose of the exhausted battery unit, take it to a local recycling station.

Contact the local government offices for further details.

This product is fitted with a 3.7 V 250 mAh rechargeable battery (non-removable).

Please read all of the instructions carefully and retain for future reference.

## Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the product.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This product contains no user serviceable parts. If the product and any of its accessories are malfunctioning or it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and USB cable out of the reach of children.

Keep the product and USB cable away from heat or sharp edges that could cause damage.

Keep the product away from heat sources, direct sunlight, humidity, water and any other liquid.

Keep the USB cable away from any parts of the product that may become hot during use.

Keep the product free from dust, lint etc.

Made in China.  
CD230217/M000000/M1

Manufactured by UP Global Sourcing,  
Victoria Street,  
Manchester OL9 0DD, UK.



**intempo+**

UP Global Sourcing UK Ltd. hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

The declaration of conformity may be consulted at UP Global Sourcing, Victoria Street, Manchester, OL9 0DD.

## Getting Started

Remove the product from the box.  
Remove any packaging from the product.  
Place the packaging inside the box and either store or dispose of safely.

## In the Box

WDS19 Slimline Headphones  
USB Charging Cable  
Instruction Manual

## Features

Bluetooth Version: 4.2  
Wireless Range: 10 m  
Drive Size: 40 mm  
Impedance: 32  $\Omega$   
Sensitivity: 100 dB ( $\pm 5$ )  
Frequency Response: 20 Hz–20 kHz  
Built-in Rechargeable Battery  
Built-in Hands-free Microphone

**STEP 2:** To connect or disconnect a call using the WDS19 Slimline Headphones, press '📞'.

**STEP 3:** The volume of the phone call can be controlled using either the WDS19 Slimline Headphones or the Bluetooth compatible device.

**STEP 4:** To reject an incoming phone call, press and hold '📞' for approximately 2–3 seconds.

## Aux. Mode

To use Aux. mode, connect one end of a line-in Aux. cable (not included) to the Aux. input port on the WDS19 Slimline Headphones and the other end to an MP3 player or other compatible audio source.

**Note:** Once connected, sound can be controlled using the relevant controls on the compatible audio

## Instructions for Use

### Charging the Battery

The WDS19 Slimline Headphones are fitted with a 3.7 V 250 mAh battery. It is recommended that the battery is fully charged before first use; this will take approximately 2–3 hours.

Connect the micro USB end of the USB charging cable into the micro USB charging port on the WDS19 Slimline Headphones and the other end to a compatible USB port.

Whilst charging, the LED indicator light will illuminate red. Once the battery has fully charged, the LED indicator light will turn off.

Carefully disconnect both ends of the USB charging cable and store it safely for future use.

source. To skip tracks, use the relevant controls on the compatible audio source.

The WDS19 Slimline Headphones cannot be used to skip tracks during Aux. mode.

The LED indicator light will remain blank during Aux. mode.

Once the line-in Aux. cable is removed, the WDS19 Slimline Headphones will automatically turn off.

### Care and Maintenance

Wipe the WDS19 Slimline Headphones with a soft, damp, lint-free cloth and allow to dry thoroughly.

## Using the WDS19 Slimline Headphones

### Basic Functionality

Turn on the WDS19 Slimline Headphones by pressing and holding '📞' for approximately 2 seconds.

Pause a track by pressing '▶'; push it again to resume the track.

Adjust the volume of the WDS19 Slimline Headphones using '⏪v+' and '-v▶'. Press and hold '⏪v+' to increase the volume; decrease the volume by pressing and holding '-v▶'.

To switch to the next track, press '-v▶'; play the previous track by pressing '⏪v+'.

Hold '📞' for approximately 3 seconds to turn off the WDS19 Slimline Headphones.

**Do not:** Immerse the WDS19 Slimline Headphones in water or any other liquid.

Expose the WDS19 Slimline Headphones to liquid, moisture or humidity to avoid the product's internal circuit being affected.

Use any abrasive cleaning solvents to clean the WDS19 Slimline Headphones, as this can cause damage.

Expose the WDS19 Slimline Headphones to sharp objects, which may cause damage.

Expose the WDS19 Slimline Headphones to extremely high or low temperatures as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.

Drop the WDS19 Slimline Headphones, as the internal circuit may become damaged.

## Modes

Ensure that the WDS19 Slimline Headphones are turned on before using any of the following modes.

### Bluetooth Mode

**STEP 1:** Once the WDS19 Slimline Headphones has been turned on, the LED indicator light will flash blue to signal that the WDS19 Slimline Headphones are ready to be paired with a Bluetooth compatible device.

**STEP 2:** Search for the WDS19 Slimline Headphones using a Bluetooth compatible device. Select 'EE1758' to connect and pair.

Attempt to disassemble the WDS19 Slimline Headphones, as this may cause damage to the product.  
Dispose of the WDS19 Slimline Headphones in a fire as it will result in an explosion.

### Specification

Product Code: EE1758  
Bluetooth Version: 4.2  
Wireless Distance: 10 m  
Driver Size: 40 mm  
Impedance: 32  $\Omega$   
Sensitivity: 100 dB ( $\pm 5$ )  
Frequency Response: 20 Hz–20 kHz  
Charging Voltage: 5 V DC USB  
Working voltage: 3.7 V  
Battery: 250 mAh

**Note:** Once connected, sound can be controlled using either the WDS19 Slimline Headphones or the relevant controls on the Bluetooth compatible device.  
The LED indicator light will remain a solid blue during Bluetooth mode.

### Making Phone Calls via a Bluetooth Compatible Device

Once the Bluetooth compatible device has been paired with the WDS19 Slimline Headphones, phone calls can be made.

**STEP 1:** Using the Bluetooth compatible device, dial the number to be called and select the Bluetooth/hands-free option.  
The WDS19 Slimline Headphones and built-in microphone will now act as a hands-free device.