




Pair & Play
MINI BLUETOOTH®
SOUNDBAR

Do not immerse the unit in water or any other liquid.
Do not operate the unit with wet hands.
Do not operate the unit if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.
Do not leave the unit unattended whilst connected to another device.
Do not use the unit for anything other than its intended use.
Do not use any accessories other than those supplied.
Do not use this unit outdoors.
Do not store the unit in direct sunlight or in high humidity conditions.
Do not put objects into any of

Description of Parts

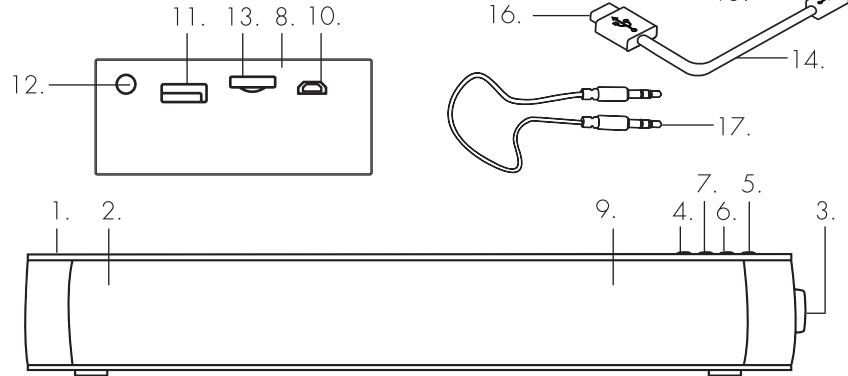

- | | |
|---|------------------------------|
| 1. Mini Bluetooth® Soundbar Main Unit | 10. 5 V 1 A DC Charging Port |
| 2. Speaker | 11. USB Port |
| 3. On/Off/Volume Control Dial | 12. Aux. Input Port |
| 4. Play/Pause/Hands-free Button (▶ /☎) | 13. TF Card Slot |
| 5. Skip + Button (▶▶+) | 14. USB Charging Cable |
| 6. Skip - Button (◀◀-) | 15. Micro USB Connector |
| 7. Mode Button (M) | 16. USB Connector |
| 8. LED Indicator Light | 17. Line-In Aux. Cable |
| 9. Hands-free Microphone | |

the openings.
Do not play music at excessive volume levels as damage to hearing and/or the equipment may occur.
It is imperative to unplug the USB cable after the unit has been used, before it is cleaned and whilst being repaired.
This unit must be placed on a stable, heat-resistant surface.
This unit is intended for domestic use only. It should not be used for commercial purposes.
To prevent possible hearing damage, do not listen at high volume levels for long periods of time.
Warning: Keep the unit away from flammable materials.

Battery Safety

The supply terminals are not to be short-circuited.
In the event of any batteries leaking, do not allow any liquid to come into contact with the skin or eyes.
If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
Keep batteries out of the reach of children.
Avoid storing in direct sunlight.
Do not dispose of batteries in a fire.
Do not crush, puncture, dismantle or otherwise damage batteries.
Do not store above 60 °C.
Do not expose batteries to heat or fire as they may explode.

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical units, basic safety precautions should always be followed.
Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this unit, only if they have been given supervision or instruction concerning use of the hazards involved.
Children should be supervised to ensure that they do not play with the unit.
Unless they are older than 8 and supervised, children should not perform cleaning or

user maintenance.
This unit is not a toy.
This unit contains no user serviceable parts. If the unit and any of its accessories are malfunctioning or it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
Keep the unit and USB cable out of the reach of children.
Keep the unit and USB cable away from heat or sharp edges that could cause damage.
Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquid.
Keep the USB cable away from any parts of the unit that may become hot during use.
Keep the unit free from dust, lint etc.

CD100117/M000000/1/1
Made in China.
Manchester OL9 0DD, UK.
Victoria Street,
UP Global Sourcing UK Ltd.,
Manufactured by:



intempo



Do not subject batteries to mechanical shock.
Do not dispose of exhausted batteries in household waste.
To dispose of any batteries, take them to a local recycling station.
Contact the local government offices for further details.
This unit is fitted with a 3.7 V 1500 mAh battery.
UP Global Sourcing UK Ltd. hereby declares that this Bluetooth speaker is in compliance with the essential requirements and other provisions of directive 2014/53/EU.
The declaration of conformity may be consulted at UP Global Sourcing UK Ltd., Victoria Street, Manchester, OL9 0DD.

Care and Maintenance

Wipe the Mini Bluetooth® Soundbar with a soft, damp, lint-free cloth and allow to dry thoroughly.

Do not:

Immerse the Mini Bluetooth® Soundbar in water or any other liquid.

Expose the Mini Bluetooth® Soundbar to liquid, moisture or humidity to avoid the unit's internal circuit being affected.

Use any abrasive cleaning solvents to clean the Mini Bluetooth® Soundbar, as this can cause damage.

Expose the Mini Bluetooth® Soundbar to sharp objects, which may cause damage.

Expose the Mini Bluetooth®

Soundbar to extremely high or low temperatures as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts. Drop the Mini Bluetooth® Soundbar, as the internal circuit may become damaged. Attempt to disassemble the Mini Bluetooth® Soundbar, as this may cause damage to the unit. Dispose of the Mini Bluetooth® Soundbar in a fire, as it will result in an explosion.

Getting Started

Remove the unit from the box. Remove any packaging from the unit. Place the packaging inside the box and either store or dispose of safely.

In the Box

Mini Bluetooth® Soundbar
USB Charging Cable

player or other compatible audio source.
STEP 2: If the Mini Bluetooth® Soundbar does not automatically change to Aux. mode, press 'M' until it is selected. Once a connection has been made, the LED indicator light will flash blue in slow bursts to signal that the Mini Bluetooth® Soundbar is in Aux. mode.

Note: Once connected, sound can be controlled using either the Mini Bluetooth® Soundbar or the relevant controls on the compatible audio source.

TF Card/USB Mode

STEP 1: To use TF mode, insert a TF card (not included) into the TF card slot on the back of the Mini Bluetooth® Soundbar. The Mini Bluetooth® Soundbar will automatically change to TF mode.
STEP 2: To use USB mode, insert a compatible USB drive into the USB port on the back of the Mini Bluetooth® Soundbar. The Mini Bluetooth® Soundbar will automatically change to USB mode.

Line-in Aux. Cable
Instruction Manual

Features

Bluetooth Version: 2.1 + EDR
Wireless Range: 10 m
Speaker Output: 2 x 3 W
Built-in Rechargeable Battery
USB Charging Cable (Included)
Line-in Aux. Cable (Included)
Ideal for Use with TV/PC via 3.5 mm Line-in. Aux.

Instructions for Use

Charging the Battery

The Mini Bluetooth® Soundbar is fitted with a 3.7 V 1500 mAh Li-ion battery. It is recommended that the battery be charged fully before first use; this will take approximately 4–5 hours. Connect the micro USB end of the USB charging cable into the 5 V 1 A DC charging port on the back of the Mini Bluetooth® Soundbar and the other end to a compatible USB port. Whilst charging, the LED indicator light will illuminate red. Once the battery has charged

STEP 3: If the Mini Bluetooth® Soundbar does not automatically change to TF or USB mode, press 'M' until the desired operation is selected.

Note: Once connected, sound can be controlled using the Mini Bluetooth® Soundbar. Make sure that there is no USB drive inserted whilst using TF mode or vice versa, as this could interfere with playback. The Mini Bluetooth® Soundbar will only recognise MP3 audio files; if other files are present on the TF card, this may prevent the Mini Bluetooth® Soundbar from playing.

Troubleshooting

The Mini Bluetooth® Soundbar has no power.

The Mini Bluetooth® Soundbar has run out of charge. Charge the Mini Bluetooth®

fully, the LED indicator light will switch off. Once the Mini Bluetooth® Soundbar is fully charged, carefully disconnect both ends of the USB charging cable and store it safely for future use.

Using the Mini Bluetooth® Soundbar

Basic Functionality

Turn on the Mini Bluetooth® Soundbar by turning the On/Off/Volume control dial in a clockwise direction, until it clicks. Pause a track by pressing '⏸'; push it again to resume the track.

Adjust the volume of the Mini Bluetooth® Soundbar using the On/Off/Volume control dial. Rotate the On/Off/Volume control dial in a clockwise direction to increase the volume; decrease the volume by rotating it in an anti-clockwise direction. To switch to the next track, press '▶+'. Play the previous track by pressing '◀-'. Cycle between functions by pressing 'M' until the desired operation is selected (Bluetooth, Aux., USB, TF).

Rotate the On/Off/Volume control dial in an anti-clockwise direction, until it clicks to turn off the Mini Bluetooth® Soundbar.

Soundbar following the instructions in the section entitled 'Charging the Battery'.

The Mini Bluetooth® Soundbar has no sound.

The volume level is set too low. Check that the volume level is set at an audible level and adjust accordingly with the connected device.

The Mini Bluetooth® Soundbar is not paired with a Bluetooth compatible device. Follow the instructions in the section entitled 'Bluetooth Mode'. The Mini Bluetooth® Soundbar is not connected to a compatible audio source. Follow the instructions in the section entitled 'Aux. Mode'.

Unable to pair a device with the Mini Bluetooth® Soundbar .

The Bluetooth device is not compatible with the Mini Bluetooth® Soundbar. Ensure that the Bluetooth device is compatible with the Mini Bluetooth® Soundbar and that the Bluetooth function is switched on.

The charge of the Mini Bluetooth® Soundbar depletes quickly.

The volume level is set too high. Excessive use of the Mini Bluetooth® Soundbar at

Modes

The Mini Bluetooth® Soundbar must be turned on before using any of the following modes.

Bluetooth Mode

Pairing with a Bluetooth Compatible Device

STEP 1: Once the Mini Bluetooth® Soundbar has been turned on, the LED indicator light will flash blue in quick bursts to indicate that the Mini Bluetooth® Soundbar is ready to be paired with a Bluetooth compatible device.

STEP 2: Search for the Mini Bluetooth® Soundbar using a Bluetooth compatible device. Select 'EE1782' and pair. Once a connection has been made, the LED indicator light will remain blue to indicate that the devices are paired.

Note: Once connected, sound can be controlled using either the Mini Bluetooth® Soundbar or the relevant controls on the Bluetooth compatible device.

high volumes will drain the battery quickly. Charge the Mini Bluetooth® Soundbar following the instructions in the section entitled 'Charging the Battery' and listen at a lower volume for better results. The battery may be reaching the end of its service life and will need to be removed. See the section entitled 'Battery Safety'.

Specifications

Product Code: EE1782MIXBMFOB
Bluetooth Version: 2.1 + EDR
Wireless Range: 10 m
Speaker Output: 2 x 3 W
Charging Voltage: 5 V 1 A DC
Working Voltage: 3.7 V
Rechargeable Battery: 1500 mAh Li-ion

Making Phone Calls via a Bluetooth Compatible Device

Once the Bluetooth compatible device has been paired with the Mini Bluetooth® Soundbar, phone calls can be made.

STEP 1: Using the Bluetooth compatible device, dial the number to be called and select the Bluetooth/hands-free option. The Mini Bluetooth® Soundbar and its built-in microphone will now act as a hands-free device.

STEP 2: To connect or disconnect a call using the Mini Bluetooth® Soundbar, press '⏸'.

STEP 3: The volume of the phone call can be controlled using either the Mini Bluetooth® Soundbar or the Bluetooth compatible device.

STEP 4: To reject an incoming phone call, press and hold '⏸' for approx. 2–3 seconds.

Aux. Mode

STEP 1: To use Aux. mode, connect one end of the line-in Aux. cable to the Aux. input port on the back of the Mini Bluetooth® Soundbar and the other end to an MP3



GLOBAL SOURCING
THE ULTIMATE WAY

Manchester
OL9 0DD
United Kingdom
www.upgs.com

t: +44 (0) 161 627 1400

f: +44 (0) 161 628 2126

hk: +852 6681 9752

cn: +86 1 3417586804

Artworker:	Jennifer Dodd
Date:	23/05/17
Project Name:	EEV171059 BAM EE1782MIXBMFOB
Type of Artwork:	Instruction Leaflet
Size:	A4 Folding 1PP
Software Used:	Indesign CS6
Typefaces:	Futura

- Cyan
- Magenta
- Yellow
- Black
- PMS 2995
- PMS
- PMS
- PMS

Artwork Version **2**

Artwork Scale 1:1

©2017 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.