


SPORTS EARPHONES RUNNING SET



intempo®
Making Music Cool

INSTRUCTION MANUAL

Description of Parts

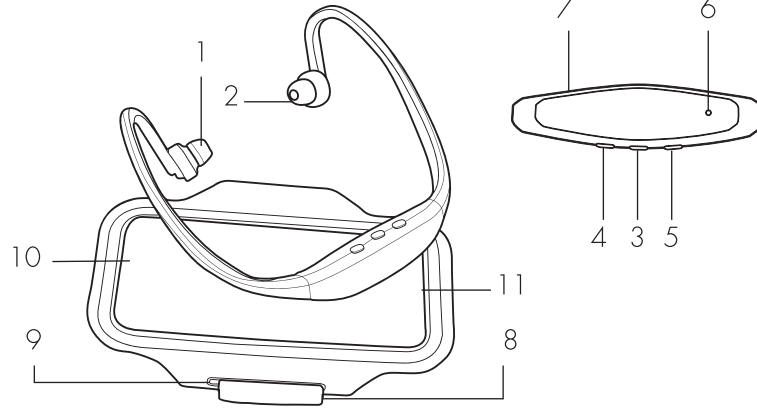

For the Sports Earphones


1. Left Earbud
2. Right Earbud
3. Power/Play/Pause Button
4. Skip/Volume – Button
5. Skip/Volume + Button
6. LED Indicator Light
7. USB Charging Port

For the Adjustable Armband

8. Strap
9. Securing Slot(s)
10. Phone Holder
11. Viewing Window

that could cause damage. Keep the product away from heat sources, direct sunlight, humidity, water and any other liquid. Keep the USB cable away from any parts of the product that may become hot during use. Keep the product free from dust, lint etc. Do not immerse the product in water or any other liquid. Do not operate the product with wet hands. Do not operate the product if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself

and damage to the product. Do not leave the product unattended whilst connected to another device. Do not use the product for anything other than its intended use. Do not use any accessories other than those supplied. Do not store the product in direct sunlight or in high humidity conditions. Do not play music at excessive volume levels as damage to hearing and/or the equipment may occur. This product is intended for domestic use only. It should not be used for commercial purposes.

 To prevent possible hearing damage, do not listen at high volume levels for long periods of time.

Warning: Keep the product away from flammable materials.

Battery Safety

The battery unit should not be placed near excessive heat sources, such as fire. The supply terminals are not to be short-circuited. Exhausted batteries should be removed from the product to avoid leakage. In the event of the battery leaking, do not allow any liquid

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical products, basic safety precautions should always be followed. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with

the product. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance. This product is not a toy. This product contains no user serviceable parts. If the product and any of its accessories are malfunctioning or it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm. Keep the product and USB cable out of reach of children. Keep the product and USB cable away from heat or sharp edges

11/00000000/11/11/11/11

Made in China.

Manchester OL9 0DD. UK.

Victoria Street,

Manufactured UP Global Sourcing,



intempo

to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice. Keep batteries out of reach of children. Avoid storing in direct sunlight. Do not dispose of the battery unit in a fire. Do not crush, puncture, dismantle or otherwise damage the battery. Do not store above 60 °C. Do not expose batteries to heat or fire as they may explode. Do not subject the battery to mechanical shock.

Do not dispose of the exhausted battery in household waste. To dispose of the exhausted battery, take it to a local recycling station. Contact the local government offices for further details.

This product is fitted with a 3.7 V 100 mAh Li-ion rechargeable battery (non-removable).

UP Global Sourcing UK Ltd. hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Using the Sports Earphones

Wearing the Sports Earphones

The Sports Earphones should be positioned behind the head, with the earbuds hooking over and into the ears.

Basic Functionality

Turn on the Sports Earphones by pressing and holding 'Power/Play/Pause' for approximately 2 seconds. Pause a track by pressing 'Power/Play/Pause'; press it again to resume the track. Adjust the volume of the Sports Earphones by using 'Skip/Volume +' and 'Skip/Volume -'. Press 'Skip/Volume +' to increase the volume; decrease the volume by

The declaration of conformity may be consulted at UP Global Sourcing, Victoria Street, Manchester, OL9 0DD.

Getting Started

Remove the product from the box. Remove any packaging from the product. Place the packaging inside the box and either store or dispose of safely.

In the Box

Sports Earphones
Adjustable Armband
USB Charging Cable
Instruction Manual

pressing 'Skip/Volume -'. To switch to the next track, press and hold 'Skip/Volume +'; play the previous track by pressing and holding 'Skip/Volume -'. Press and hold 'Power/Play/Pause' for approximately 5 seconds to turn off the Sports Earphones.

Modes

Ensure that the Sports Earphones are turned on before using any of the following modes.

Bluetooth Mode

Pairing with a Bluetooth Compatible Device

STEP 1: Once the Sports Earphones have been turned on, the LED indicator light will flash blue in quick bursts to signal that the Sports

Features

Sports Earphones

Bluetooth Version: 2.1+ EDR
Wireless Range: 10 m
Driver Size: 15 mm
Impedance: 32 Ω
Sensitivity: 80 dB
Frequency Response: 20 Hz–20kHz
Battery: 100 mAh

Adjustable Armband

Elasticated Strap
Comfortable Fit
Easy to Adjust
Sturdy Phone Holder
Large Viewing Window

Earphones are ready to be paired with a Bluetooth compatible device.

STEP 2: Search for the Sports Earphones using a Bluetooth compatible device. Select 'EE1784' to connect and pair. Once a connection has been made, the LED indicator light will slowly flash blue to indicate that the Sports Earphones are now paired with the Bluetooth compatible device.

Note: Once connected, sound can be controlled using either the Sports Earphones or the relevant controls on the Bluetooth compatible device.

Care and Maintenance

Wipe the Sports Earphones with a soft, damp, lint-free cloth and allow to dry thoroughly.

Instructions for Use

Charging the Battery

The Sports Earphones are fitted with a 3.7 V 100 mAh Li-ion battery. It is recommended that the battery is fully charged before first use; this will take approximately 2–3 hours. Connect the micro USB end of the USB charging cable into the USB charging port on the Sports Earphones and the other end to a compatible USB port. Whilst charging, the LED indicator light will illuminate red. Once the battery has fully charged, the LED indicator light will turn off. Once the Sports Earphones are fully charged, carefully disconnect both ends of the USB charging cable and store it safely for future use.

Do not:

Immerse the Sports Earphones in water or any other liquid. Expose the Sports Earphones to liquid, moisture or humidity to avoid the product's internal circuit being affected. Use any abrasive cleaning solvents to clean the Sports Earphones, as this can cause damage. Expose the Sports Earphones to sharp objects, which may cause damage. Expose the Sports Earphones to extremely high or low temperatures as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts. Drop the Sports Earphones, as the internal circuit may become damaged.

Note: The LED indicator light will flash blue continuously and the Sports Earphones will announce "low battery, please charge" when they need to be recharged.

Wearing the Adjustable Armband

STEP 1: Place a phone into the phone holder, ensuring that the screen is facing forward so that it can be seen through the viewing window.

STEP 2: Wrap the strap around the arm it is to be worn on and then insert it through the securing slots to keep it in position. The hook and loop tapes will keep the strap secure.

STEP 3: To tighten the adjustable armband, unfasten the strap and tighten as required. Use the hook and loop tapes to secure it back into position.

Attempt to disassemble the Sports Earphones, as this may cause damage to the product. Dispose of the Sports Earphones in a fire, as it will result in an explosion.

Specifications

Product Code: EE1784
Bluetooth Version: 2.1 + EDR
Wireless Range: 10 m
Driver Size: 15 mm
Impedance: 32 Ω
Sensitivity: 80 dB
Frequency Response: 20 Hz–20 kHz
Charging Voltage: 5 V DC USB
Working Voltage: 3.7 V
Battery: 100 mAh