


# SPORTS EARPHONES RUNNING SET

## INSTRUCTION MANUAL

### Description of Parts

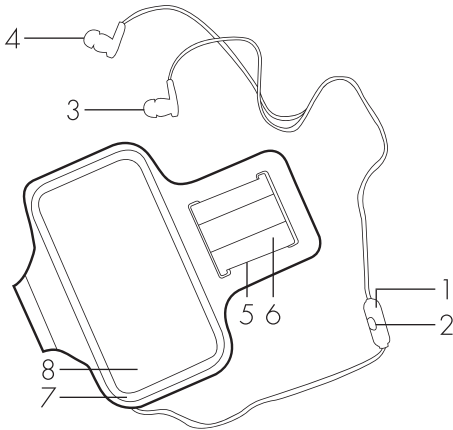

### For the Sports Earphones

1. Microphone
2. Play/Pause Button (O)
3. Left Earbud
4. Right Earbud

### For the Adjustable Armband

5. Strap
6. Securing Slot(s)
7. Phone Holder
8. Viewing Window

Please read all of the instructions carefully and retain for future reference.

## Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and

knowledge can use this product, only if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the product. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.

This product contains no user serviceable parts. If the product and any of its accessories are malfunctioning or it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product out of the reach of children.

Keep the product away from heat or sharp edges that could cause damage.

Keep the product away from heat sources, direct sunlight, humidity, water and any other liquid.

Keep the product free from dust, lint etc. Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not operate the product if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the product.

Do not use the product for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not store the product in direct sunlight or in high humidity conditions.

Do not play music at excessive volume levels as damage to hearing and/or the equipment may occur.

This product is intended for domestic use only. It should not be used for commercial purposes.



To prevent possible hearing damage, do not listen at high volume levels for long periods of time.

**Warning:** Keep the product away from flammable materials.

## Care and Maintenance

Wipe the Sports Earphones with a soft, damp, lint-free cloth and allow to dry thoroughly.

### Do not:

Immerse the Sports Earphones in water or any other liquid.

Expose the Sports Earphones to liquid, moisture or humidity to avoid the product's internal circuit being affected. Use any abrasive cleaning solvents to clean the Sports Earphones, as this can cause damage.

Expose the Sports Earphones to sharp objects, which may cause damage.

Expose the Sports Earphones to extremely high or low temperatures as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.

Attempt to disassemble the Sports Earphones, as this may cause damage to the product.

Dispose of the Sports Earphones in a fire, as it will result in an explosion.

## Getting Started

Remove the product from the box.

Remove any packaging from the product. Place the packaging inside the box and either store or dispose of safely.

## In the Box

Sports Earphones  
Adjustable Armband  
Instruction Manual

## Features

### Sports Earphones

Driver Size: 15 mm  
Impedance: 32  $\Omega \pm 5$   
Sensitivity: 58 dB  
Frequency Response:  
20 Hz–20 kHz

### Adjustable Armband

Elasticated Strap  
Comfortable Fit  
Easy to Adjust  
Sturdy Phone Holder  
Large Viewing  
Window

## Instructions for Use

### Wearing the Adjustable Armband

**STEP 1:** Place a phone into the phone holder, ensuring that the screen is facing forward so that it can be seen through the viewing window.

**STEP 2:** Wrap the strap around the arm it is to be worn on and then insert it through the securing slots to keep it in position. The hook and loop tapes will keep the strap secure.

**STEP 3:** To tighten the adjustable armband, unfasten the strap and tighten as required. Use the hook and loop tapes to secure it back into position.

### Using the Sports Earphones

#### Basic Functionality

Pause a track by pressing 'O'; push it again to resume the track.

#### Specifications

Product Code: EE2130

Driver Size: 15 mm

Impedance: 32  $\Omega \pm 5$

Sensitivity: 58 dB

Frequency Response: 20 Hz–20 kHz

Manufactured by UP Global Sourcing, Victoria  
Street, Manchester OL9 0DD. UK.

Made in China.

CD010217/M0000000/V1

