 



WDS6 FABRIC SPEAKER

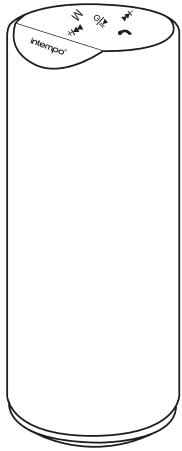


intempo[®]
Making Music Cool

INSTRUCTION MANUAL

 Description of Parts

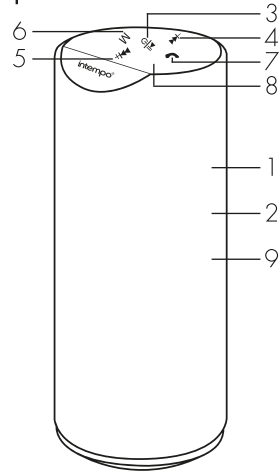

- | | |
|----------------------------------|-----------------------------------|
| 1. WDS6 Fabric Speaker main unit | 7. Hands-free Button (☎) |
| 2. Speakers | 8. LED Indicator Light |
| 3. Power/Play/Pause Button (⏮) | 9. Hands-free Built-in Microphone |
| 4. Volume/Skip - Button (⏪) | 10. Aux. Input Port |
| 5. Skip/Volume + Button (⏩) | 11. 5 V 1 A DC Charging Port |
| 6. Mode Button (M) | 12. TF Card Slot |

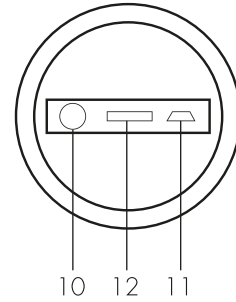 

become hot during use. Keep the unit free from dust, lint etc. Do not immerse the unit in water or any other liquid. Do not operate the unit with wet hands. Do not operate the unit if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the unit. Do not leave the unit unattended whilst connected to another device. Do not use the unit for anything other than its intended use. Do not use any accessories other than those supplied. Do not use this unit outdoors. Do not store the unit in direct sunlight or in high

humidity conditions. Do not put objects into any of the openings. Do not play music at excessive volume levels as damage to hearing and/or the equipment may occur. It is imperative to unplug the USB cable after the unit has been used, before it is cleaned and whilst being repaired. This unit must be placed on a stable, heat-resistant surface. This unit is intended for domestic use only. It should not be used for commercial purposes. To prevent possible hearing damage, do not listen at high volume levels for long periods of time.

Warning: Keep the unit away

from flammable materials.

Battery Safety

The supply terminals are not to be short-circuited. Exhausted batteries should be removed from the product to avoid leakage. In the event of any batteries leaking, do not allow any liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice. Keep batteries out of the reach of children. Avoid storing in direct sunlight. Do not dispose of batteries in a fire.

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

 
When using electrical units, basic safety precautions should always be followed. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this unit, only if they have been given supervision or instruction concerning use of the unit in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the unit. Unless they are older than 8 and supervised, children should not

perform cleaning or user maintenance. This unit is not a toy. This unit contains no user serviceable parts. If the unit and any of its accessories are malfunctioning or it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm. Keep the unit and USB cable out of the reach of children. Keep the unit and USB cable away from heat or sharp edges that could cause damage. Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquid. Keep the USB cable away from any parts of the unit that may

CD07117/M000000/M

Made in China.

Manufactured by
UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester O19 0DD, UK.

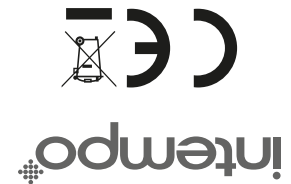

Do not crush, puncture, dismantle or otherwise damage batteries. Do not store above 60 °C. Do not expose batteries to heat or fire as they may explode. Do not subject batteries to mechanical shock. Do not dispose of exhausted batteries in household waste. To dispose of any batteries, take them to a local recycling station. Contact the local government offices for further details. This unit is fitted with an 800 mAh Li-ion rechargeable battery (non-removable). UP Global Sourcing UK Ltd. hereby declares that this unit is in compliance with the essential requirements and other provisions

of directive 2014/53/EU.

The declaration of conformity may be consulted at UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD.

Care and Maintenance

Wipe the speaker with a soft, damp, lint-free cloth and allow to dry thoroughly.

Do not:

Immerse the speaker in water or any other liquid.

Expose the speaker to liquid, moisture or humidity to avoid the unit's internal circuit being affected.

Use any abrasive cleaning solvents to clean the speaker, as this can cause damage.

Expose the speaker to sharp

objects, which may cause damage.

Expose the speaker to extremely high or low temperatures as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.

Drop the speaker, as the internal circuit may become damaged.

Attempt to disassemble the speaker, as this may cause damage to the unit.

Dispose of the speaker in a fire, as it will result in an explosion.

Getting Started

Remove the unit from the box.

Remove any packaging from the unit.

Place the packaging inside the box and either store or dispose of safely.

other end to an MP3 player or other compatible audio source.

STEP 2: If the speaker does not automatically change to Aux. mode, press 'M' until it is selected.

Note: Once connected, sound can be controlled using the relevant controls on the compatible audio source. The speaker cannot be used to skip tracks during Aux. mode.

TF Card/USB Mode

STEP 1: To use TF mode, insert a TF card (not included) into the TF card slot on the bottom of the speaker.

STEP 2: If the speaker does not automatically change to TF mode, press 'M' until it is selected.

In the Box

WDS6 Fabric Speaker
USB Charging Cable
Line-in Aux. Cable
Instruction Manual

Features

Bluetooth Version: 3.0
Wireless Range: 10 m
Speaker Output: 2 x 3 W
Built-in Rechargeable Battery
Built-in Hands-free Microphone
USB Charging Cable (Included)
Line-in Aux. Cable (Included)
Supports TF Cards

Instructions for Use

Charging the Battery

The speaker is fitted with a 3.7 V 800 mAh Li-ion battery. It is recommended that the battery is fully charged before first use; this will take approx. 3 hours. Connect the micro USB end of the USB charging cable into the 5 V 1 A DC charging port on the speaker and the

Note: Once connected, sound can be controlled using the speaker. The speaker will only recognise MP3 audio files; if other files are present on the TF card, this may prevent the speaker from playing.

Troubleshooting

The speaker has no power.

The speaker has run out of charge.

Charge speaker following the instructions in the section entitled 'Charging the Battery'.

The speaker has no sound.

The volume level is set too low. Check that the volume level is set at an audible level and adjust accordingly with the connected device.

The speaker is not paired with a Bluetooth

other end to a compatible USB port. Whilst charging, the LED indicator light will flash blue and red. Once the battery has fully charged, the LED indicator light will switch off.

Carefully disconnect both ends of the USB charging cable and store it safely for future use.

Using the Bluetooth® Fabric Speaker Basic Functionality

Turn on the speaker by pressing and holding 'M'.

Pause a track by pressing 'M'; press it again to resume the track.

Adjust the volume of the speaker using '▶▶' and '◀◀'. Press and hold '▶▶' to increase the volume; decrease the volume by pressing and holding '◀◀'.

To switch to the next track, press '▶▶' play the previous track by pressing '◀◀'.

Cycle between functions by pressing 'M' until the desired operation is selected.

Press 'M' to turn off the speaker.

compatible device. Follow the instructions in the section entitled 'Bluetooth Mode'.

The speaker is not connected to a compatible audio source. Follow the instructions in the section entitled 'Aux. Mode'.

Unable to pair a device with the speaker.

The Bluetooth device is not compatible with the speaker. Make sure that the Bluetooth device is compatible with the speaker and that the Bluetooth function is switched on.

The charge of the speaker depletes quickly.

The volume level is set too high.

Excessive use of the speaker at high volumes will drain the battery quickly. Charge the speaker following the instructions in the section entitled 'Charging the Battery' and listen at a lower volume for better results.

The battery may be reaching the end of its service life and will need to

Modes

The speaker must be turned on before using any of the following modes.

Bluetooth Mode

STEP 1: Once the speaker has been turned on, press 'M' until Bluetooth mode has been selected; the indicator light will flash blue to signal that it is ready to pair.

STEP 2: Search for the speaker using a Bluetooth compatible device. Select 'EE2678' to connect and pair. Once a connection has been made, the indicator light will remain blue to signal that it is now paired with the Bluetooth compatible device.

Note: Once connected, sound can be controlled using either the Fabric Bluetooth speaker or the relevant controls on the Bluetooth compatible device.

be removed. See the section entitled 'Battery Safety'.

Specifications

Product Code: EE2678

Bluetooth Version: 3.0

Wireless Range: 10 m

Speaker Output: 2 x 3 W

Power Supply: 5 V 1 A DC

Working Voltage: 3.7 V

Rechargeable Battery: 800 mAh Li-ion

Frequency Range: 200 Hz–20 kHz

Making Phone Calls via a Bluetooth Compatible Device

Once the Bluetooth compatible device has been paired with the Fabric Bluetooth speaker, phone calls can be made.

STEP 1: Using the Bluetooth compatible device, dial the number to be called and select the Bluetooth/hands-free option. The speaker and its built-in microphone will now act as a hands-free device.

STEP 2: To connect or disconnect a call using the speaker, press 'M'.

STEP 3: The volume of the phone call can be controlled using either the speaker or the Bluetooth compatible device.

STEP 4: To reject an incoming phone call, press and hold 'M' for approx. 2–3 seconds.

Aux. Mode

STEP 1: To use Aux. mode, connect one end of the line-in Aux. cable to the Aux. input jack on the speaker and the