 



TAILGATE LED SPEAKER

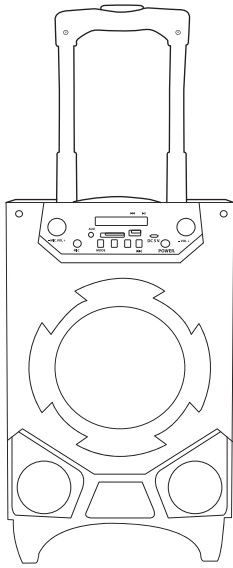


intempo
Making Music Cool

INSTRUCTION MANUAL

 
Description of Parts

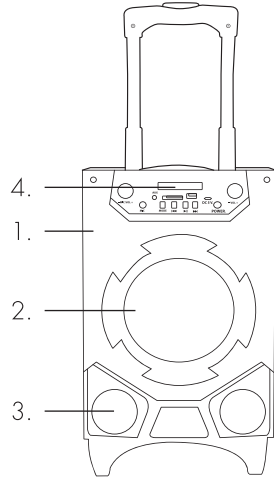

 1. Tailgate Music Speaker Main Unit
2. Speaker
3. LED Lights
4. LCD Display
5. Power Button (POWER)
6. Mode Button (MODE)
7. Skip - Button (⏮)

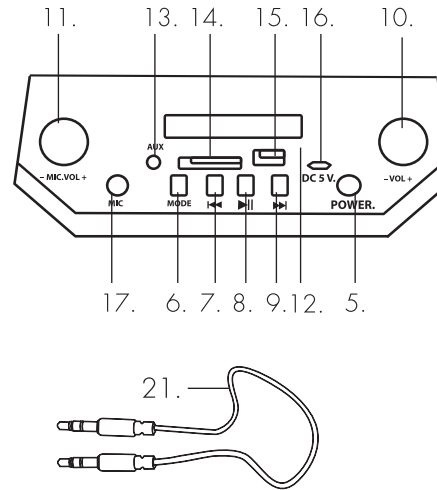

 8. Play/Pause Button (⏮)
9. Skip + Button (⏭)
10. Master Volume Control Dial
11. Mic. Volume Control Dial
12. LED Indicator Light
13. Aux. Input Port
14. TF Card Slot

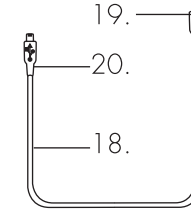

15. USB Input Port
16. 5 V 1 A DC Charging Port
17. Mic. Input Port
18. USB Charging Cable
19. USB Connector
20. Micro USB Connector
21. Line-in Aux. Cable

This unit is not a toy. This unit contains no user serviceable parts. If the unit and any of its accessories are malfunctioning or it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm. Keep the unit and USB cable out of the reach of children. Keep the unit and USB cable away from heat or sharp edges that could cause damage. Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquid. Keep the USB cable away from any parts of the unit that may become hot during use. Keep the unit free from dust, lint etc. Do not immerse the unit in water

or any other liquid. Do not operate the unit with wet hands. Do not operate the unit if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the unit. Do not leave the unit unattended whilst connected to another device. Do not use the unit for anything other than its intended use. Do not use any accessories other than those supplied. Do not use this unit outdoors. Do not store the unit in direct sunlight or in high humidity conditions. Do not move the unit whilst it is in use.

Do not put objects into any of the openings. Do not play music at excessive volume levels as damage to hearing and/or the equipment may occur. It is imperative to unplug the USB cable after the unit has been used, before it is cleaned and whilst being repaired. This unit must be placed on a stable, heat-resistant surface. This unit is intended for domestic use only. It should not be used for commercial purposes. To prevent possible hearing damage, do not listen at high volume levels for long periods of time. **Warning:** Keep the unit away from flammable materials.

Battery Safety

The supply terminals are not to be short-circuited. Exhausted batteries should be removed from the product to avoid leakage. In the event of any batteries leaking, do not allow any liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice. Keep batteries out of the reach of children. Avoid storing in direct sunlight. Do not dispose of batteries in a fire. Do not crush, puncture, dismantle or otherwise damage batteries. Do not store above 60 °C.

 
Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical units, basic safety precautions should always be followed. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this unit, only if they have been given supervision or instruction concerning use of the unit in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the unit. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

CD010317/MD0407/2

Manufactured by
UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester O19 0DD, UK.
Made in China.

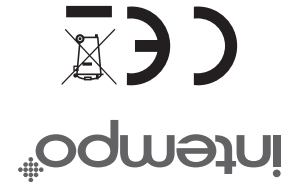

Do not expose batteries to heat or fire as they may explode. Do not subject batteries to mechanical shock. Do not dispose of exhausted batteries in household waste. To dispose of any batteries, take them to a local recycling station. Contact the local government offices for further details. This unit is fitted with a 2000 mAh Li-ion rechargeable battery (non-removable). UP Global Sourcing UK Ltd. hereby declares that this unit is in compliance with the essential requirements and other provisions of directive 2014/53/EU. The declaration of conformity may be consulted at UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD.

Care and Maintenance

Wipe the speaker with a soft, damp, lint-free cloth and allow to dry thoroughly.

Do not:

Immerse the speaker in water or any other liquid.
Expose the speaker to liquid, moisture or humidity to avoid the unit's internal circuit being affected.
Use any abrasive cleaning solvents to clean the speaker, as this can cause damage.
Expose the speaker to sharp objects, which may cause damage.
Expose the speaker to extremely high or low temperatures as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
Drop the speaker, as the internal circuit may become damaged.

Aux. Mode

STEP 1: To use Aux. mode, connect one end of the line-in Aux. cable to the Aux. input port and the other end to an MP3 player or other compatible audio source.
STEP 2: Press 'MODE' until Aux. mode is selected.

Note: Once connected, sound can be controlled using the relevant controls on the compatible audio device.

TF Card/USB Mode

STEP 1: To use TF mode, insert a TF card (not included) into the TF card slot on the front of the unit.
STEP 2: To use USB mode, insert a compatible USB drive into the USB input port on the front of the unit.
STEP 3: If the speaker does not automatically change to the relevant mode, press 'MODE' until it is selected.

Note: Once connected, sound can be controlled using the speaker.

Attempt to disassemble the speaker, as this may cause damage to the unit.
Dispose of the speaker in a fire, as it will result in an explosion.
Getting Started
Remove the unit from the box.
Remove any packaging from the unit.
Place the packaging inside the box and either store or dispose of safely.

In the Box

Tailgate Music Speaker
USB Charging Cable
Line-in. Aux Cable
Instruction Manual

Features

Bluetooth Version: 2.1 + EDR
Wireless Range: 10 m
Speaker Output: 10 W
Built-in Rechargeable Battery
USB Charging Cable (Included)
Line-in Aux. Cable (Included)

Check that there is no USB drive inserted whilst using TF mode or vice versa, as this could interfere with playback. The speaker will only recognise MP3 audio files; if other files are present on the TF card or USB drive, this may prevent the speaker from playing.

Troubleshooting

The speaker has no power.
The speaker has run out of charge. Charge the speaker following the instructions in the section entitled 'Charging the Battery'.
The speaker has no sound.
The volume level is set too low. Check that the volume level is set at an audible level and adjust accordingly.
The speaker is not paired with a Bluetooth compatible device. Follow the instructions in the section entitled 'Bluetooth Mode'.

Instructions for Use

Charging the Battery

The speaker is fitted with a 2000 mAh Li-ion battery. It is recommended that the battery is fully charged before first use; this will take approx. 4 hours. Connect the micro USB end of the USB charging cable into the 5 V 1 A DC charging port and the other end to a compatible USB port. Whilst charging, the LED indicator light will illuminate red. Once fully charged, the LED indicator light will switch off. Carefully disconnect both ends of the USB charging cable and store it safely for future use.

Using the Tailgate Music Speaker Basic Functionality

Turn on the speaker by pressing 'POWER'; the LED lights will illuminate. Pause a track by pressing '||'; push it again to resume the track. Adjust the volume of the speaker using the master volume control dial. Rotate it

in a clockwise direction to increase the volume; decrease the volume by rotating it in an anticlockwise direction. To switch to the next track, press '▶▶'; play the previous track by pressing '◀◀'. Cycle between functions by pressing 'MODE' until the desired operation is selected (Bluetooth, Aux., TF and USB). Press 'POWER' to turn off the speaker and deactivate the LED lights.

Using a Microphone (Not Included)

STEP 1: Insert a microphone connector into the mic. input port on the front of the speaker.
STEP 2: Adjust the volume of the microphone using the mic. volume control dial. Rotate it in a clockwise direction to increase the volume; decrease the volume by rotating it in an anticlockwise direction.

Warning: When using the microphone, give the speaker a 1 metre exclusion radius, as being too close will cause loud

feedback and could damage the speaker.

Modes

The speaker must be turned on before using any of the following modes.

Bluetooth Mode

STEP 1: Press 'MODE' until Bluetooth mode is selected. Once activated, the LCD screen will display 'blue'.
STEP 2: Search for the Wireless LED Tailgate using a Bluetooth compatible device. Select 'EE2728' to connect and pair. Once a connection has been made, the speaker will play a tune to signal that the devices are paired.

Note: Once connected, sound can be controlled using either the speaker or the relevant controls on the Bluetooth compatible device.

The speaker is not connected to a compatible audio source. Follow the instructions in the section entitled 'Aux. Mode'.

Unable to pair a Bluetooth device with the speaker.

The Bluetooth device is not compatible with the speaker. Make sure that the Bluetooth device is compatible with the speaker and that the Bluetooth function is switched on.

The microphone is not working.

The microphone is not securely connected to the speaker. Connect the microphone to the speaker following the instructions in the section entitled 'Using a Microphone'. Check the microphone is turned on.

The charge of the speaker depletes quickly.

The volume level is set too high. Excessive use of the speaker at high volumes will drain the battery quickly. Charge the speaker following the instructions in the section entitled

'Charging the Battery' and listen at a lower volume for better results. The battery may be reaching the end of its service life and will need to be removed. See the section entitled 'Battery Safety'.

Specifications

Product Code: EE2728
Bluetooth Version: 2.1 + EDR
Wireless Range: 10 m
Speaker Output: 10 W
Power Supply: 5 V 1 A
Rechargeable Battery: 2000 mAh