


3 METRE LED LIGHT STRIP

Instruction Manual Description of Parts

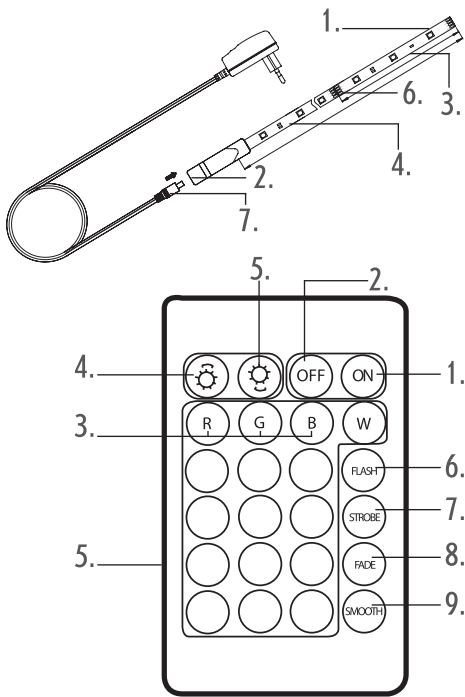

Light Strip

- | | |
|------------------------|------------------------------|
| 1. 3 M LED Light Strip | 6. Cutting Indicator Circles |
| 2. LED Port | 7. Mains Power Adaptor |
| 3. LED Wheel | |
| 4. Back Paper | |
| 5. Remote Control | |

Remote Control

- | | |
|----------------------|------------------|
| 1. On Button | 6. Flash Button |
| 2. Off Button | 7. Strobe Button |
| 3. Colour Button | 8. Fade Button |
| 4. Brightness Button | 9. Smooth Button |
| 5. Dimmer Button | |

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Unless they are older than 8 and supervised, children should not use, perform cleaning or user maintenance.

This appliance is not a toy. This appliance contains no user serviceable parts. If any part of the appliance is malfunctioning, or if the appliance has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children. Keep the appliance away from heat or sharp edges that could cause damage.

Do not immerse the electrical components of this appliance in water or any other liquid. Do not leave the appliance unattended whilst it is switched on.

Do not use the appliance if it has been dropped, if there are visible signs of damage. Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied. Do not store the appliance in direct sunlight or in high humidity conditions.

Do not remove the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand.

