 
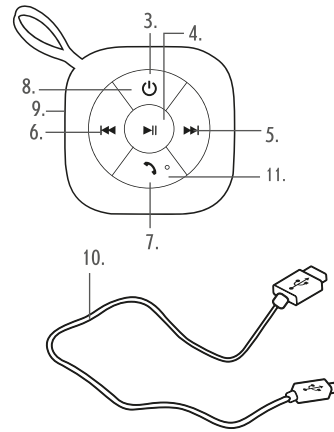 
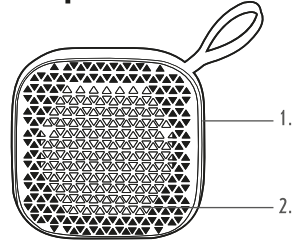 


## Description of Parts

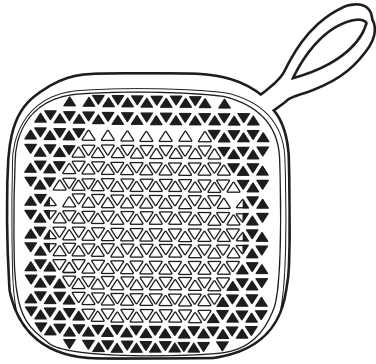

1. Bluetooth<sup>®</sup> Speaker
2. Speaker
3. Power Button (⏻)
4. Play/Pause Button (▶||)
5. Skip/Volume Button (+)
6. Skip/Volume Button (-)
7. Hands-free Button (📞)
8. LED Indicator Light
9. 5 V  $\equiv$  Charging Port
10. USB Charging Cable
11. Built-in Hands-free microphone

## WDS333 BLUETOOTH<sup>®</sup> SPEAKER INSTRUCTION MANUAL

Do not put objects into any of the openings. This product is intended for domestic use only. It should not be used for commercial purposes.

To prevent possible hearing damage, do not listen at high volume levels for long periods of time – this may also damage the product.

**NOTE:** It is advised that the product is not used whilst charging, as this could reduce the life of the battery.

### Battery Safety

The supply terminals are not to be short-circuited.

In the event of a battery and cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been

made, wash the affected area with copious amounts of water and seek medical advice. Do not use any cell or battery which is not designed for use with the product.

Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.

Keep batteries out of the reach of children. Do not dispose of batteries in a fire. Do not dismantle, open or shred secondary cells or batteries.

Do not expose cells or batteries to heat or fire.

Do not crush, puncture, dismantle or otherwise damage batteries.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not expose batteries to heat or fire as they may explode.

Do not subject batteries to mechanical shock.

Do not dispose of exhausted batteries in household waste.

Once the batteries have been exhausted, dispose of the product at a local recycling station.

Contact the local government offices for further details.

This product is fitted with a 3.7 V 300 mAh rechargeable battery (non-removable).

### Declaration of Conformity

UP Global Sourcing UK Ltd. hereby declares that this product is in compliance with the

Please retain instructions for future reference.

### Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Keep the product and its accessories out of the reach of children.

Keep small parts away from children as these may present a choking hazard. Children under 8 years should be supervised to ensure that they do not play with the product.

This product is not a toy.

This product contains no user serviceable parts. If the product and any of its accessories are malfunctioning or damaged; the unit should be recycled.

Keep the product and its accessories away from heat sources, direct sunlight, humidity, water and any other liquid, or sharp edges that could cause damage.

Ensure the product is well-ventilated. Do not leave any objects susceptible to magnetism (cash cards etc.) near the product.

Do not operate the product with wet hands. Do not operate the product if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the product.

Do not use the product for anything other than its intended use.

Do not use any accessories other than those supplied.

2A / 22500000 / 229660

www.intempo.co.uk

Made in China.  
Germany, 51149 Köln.  
UP Global Sourcing UK Ltd.,  
UK, Manchester OL9 0DD.


Manufactured by



essential requirements and other provisions of directive 2014/53/EU.

The declaration of conformity may be consulted at UP Global Sourcing UK Ltd., Victoria Street, Manchester OL9 0DD. UK or online at [www.upgs.com/pulsarcompliance](http://www.upgs.com/pulsarcompliance). Model No. EE5476.

### Disposal of Waste Batteries and Electrical and Electronic Equipment

 This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and

electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste

compatible device. The speaker can now be paired with a new compatible device. **NOTE:** Once connected, sound can be controlled using either the speaker or the relevant controls on the Bluetooth compatible device.

### Making Phone Calls via a Bluetooth Compatible Device

Once the Bluetooth compatible device has been paired with the speaker, phone calls can be made.

**STEP 1:** Using the Bluetooth compatible device, dial the number to be called and select the Bluetooth/hands-free option. The speaker and its built-in microphone will now act as a hands-free device.

disposal service, or the retailer.

### Care and Maintenance

Wipe the speaker with a soft, lint-free cloth.

#### DO NOT:

Use any abrasive cleaning solvents to clean the speaker.

Expose the speaker to extremely high or low temperatures.

Drop the speaker.


Attempt to disassemble the speaker.

Dispose of the speaker in a fire as it will result in an explosion.


### Instructions for Use

#### Charging the Battery

The speaker is fitted with a 3.7 V 300 mAh rechargeable battery (non-removable).

**STEP 2:** To connect or disconnect a call using the speaker, press .

**STEP 3:** The volume of the phone call can be controlled using either the speaker or the Bluetooth compatible device.

**STEP 4:** To reject an incoming phone call, press and hold .

### Troubleshooting


#### The speaker has no power.

The speaker has run out of charge. Charge the speaker following the instructions in the section entitled 'Charging the Battery'.

#### The speaker has no sound.

The volume level is set too low. Check that the volume level is set at an audible level and adjust accordingly with the connected device.

It is recommended that the battery is fully charged before first use; this will take approx. 2 hours.

Connect the micro USB end of the USB charging cable into the 5 V  charging port on the speaker and the USB end to a compatible USB port.

Whilst charging, the LED charging indicator light will illuminate red. Once the battery has fully charged, the LED charging indicator light will switch off.

Carefully disconnect both ends of the USB charging cable and store it safely for future use.

The speaker is not paired with a Bluetooth compatible device. Follow the instructions in the section entitled 'Bluetooth Mode'.

#### Unable to pair a device with the speaker.

The Bluetooth device is not compatible with the speaker. Check that the Bluetooth device is compatible with the speaker and that the Bluetooth function is switched on.


#### The charge of the speaker depletes quickly.

The volume level is set too high. Excessive use of the speaker at high volumes will drain the battery quickly. Charge the speaker following the instructions in the section entitled 'Charging the Battery' and listen at a lower volume for better results.

**NOTE:** It is advised that the speaker is not used whilst charging, as this could reduce the life of the battery.

### Using the Bluetooth® Speaker Basic Functionality

Turn on the speaker by pressing and holding  for approx. 3 seconds.

Pause a track by pressing  once; press it again to resume the track.

Adjust the volume of the speaker using '+' and '-'. Press and hold '+' to increase the volume; decrease the volume by pressing and holding '-'.

To switch to the next track, press '+'; play the previous track by pressing '-'.

Turn the speaker off by pressing and

holding 'POWER' for approx. 3 seconds.

### Modes

The speaker must be turned on before using any of the following modes.

#### Bluetooth Mode

**STEP 1:** Once the speaker has been turned on, the LED indicator light will flash to signal that it is ready to pair.

**STEP 2:** Search for the speaker using a Bluetooth compatible device. Select 'EE5476' to connect and pair. Once a connection has been made a tone will sound.

**STEP 3:** To unpair or remove a Bluetooth compatible device from the speaker, turn off the Bluetooth function on the

### Specifications

Product Code: EE5476

Bluetooth Version: 5.0

Wireless Range: Up to 25 m\*

Speaker Output: 3 W

Power Supply: 5 V 

Working Voltage: 3.7 V

Rechargeable Battery: 300 mAh

Operating frequency: 2.4 GHz

Max RF Output: < 10 dBm

\* Effective range may be reduced due to the presence of obstacles between connected devices.