


MINI CAPSULE SPEAKER

WIRE LESS SOUND


WITH KARABINER CLIP

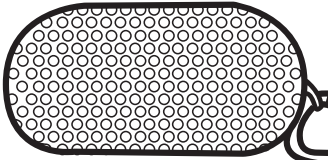

intempo
Making Music Cool

INSTRUCTION MANUAL

Description of Parts

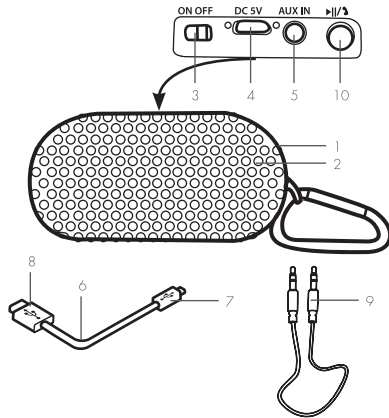

1. Mini Capsule Speaker Main Unit
2. Speakers
3. On/Off Switch
4. 5 V 1 A DC Charging Port
5. Aux. Input Jack
6. USB Charging Cable
7. Micro USB Connector
8. USB Connector
9. Line-In Aux. Cable
10. Play/Pause/Hands-Free Button

Troubleshooting

The Mini Capsule Speaker has no power.

The Mini Capsule Speaker has run out of charge. Charge the Mini Capsule Speaker following the instructions in the section entitled 'Charging the Battery'.

The Mini Capsule Speaker has no sound.

The volume level is set too low. Check that the volume level is set at an audible level and adjust accordingly with the connected device. The Mini Capsule Speaker is not paired with a Bluetooth compatible device. Follow the instructions in the section entitled 'Pairing with a Bluetooth Compatible Device'.

The Mini Capsule Speaker is not connected to a compatible audio source. Follow the instructions in the section entitled 'Connecting with a Compatible Audio Source'.

Unable to pair a device with the Mini Capsule Speaker.

The Bluetooth device is not compatible with the Mini Capsule Speaker. Ensure that the Bluetooth device is compatible with the Mini Capsule Speaker and that the Bluetooth function is switched on.

The charge of the Mini Capsule Speaker depletes quickly.

The volume level is set too high. Excessive use of the Mini Capsule Speaker at high volumes will drain the battery quickly. Charge the Mini Capsule Speaker following the instructions in the section entitled 'Charging the Battery' and listen at a lower volume for better results. The battery may be reaching the end of its service life and will need to be replaced. See the section entitled 'Battery Safety'.

Care and Maintenance

Wipe the Mini Capsule Speaker with a soft, damp, lint-free cloth and allow to dry thoroughly.

Do not immerse the Mini Capsule Speaker in water or any other liquid. Do not expose the Mini Capsule Speaker to liquid, moisture or humidity to avoid the unit's internal circuit being affected.

Do not use any abrasive cleaning solvents to clean the Mini Capsule Speaker, as this can cause damage.

Do not expose the Mini Capsule Speaker to sharp objects, which may cause damage.

Do not expose the Mini Capsule Speaker to extremely high or low temperatures as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.

Do not drop the Mini Capsule Speaker, as the internal circuit may become damaged.

Do not attempt to disassemble the Mini Capsule Speaker, as this may cause damage to the unit.

Please read all of the instructions carefully and retain for future reference.

GB

Safety Instructions

When using electrical units, basic safety precautions should always be followed.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this unit, only if they have been given supervision or instruction concerning use of the unit in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the unit. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This unit is not a toy.

This unit contains no user serviceable parts. If the unit and any of its accessories are malfunctioning or it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the unit and USB cable out of reach of children. Keep the unit and USB cable away from heat or sharp edges that could cause damage.

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquid.

Keep the USB cable away from any parts of the unit that may become hot during use.

Keep the unit free from dust, lint etc.

Do not immerse the unit in water or any other liquid.

Do not operate the unit with wet hands.

Do not operate the unit if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not leave the unit unattended whilst connected to another device.

Do not use the unit for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not store the unit in direct sunlight or in high humidity conditions.

Do not put objects into any of the openings.

Do not play music at excessive volume levels as damage to hearing and/or the equipment may occur.

It is imperative to unplug the USB cable after the unit has been used, before it is cleaned and whilst being repaired.

This unit must be placed on a stable, heat-resistant surface.

This unit is intended for domestic use only. It should not be used for commercial purposes.

To prevent possible hearing damage, do not listen at high volume levels for long periods of time.

Do not dispose of the Mini Capsule Speaker in a fire as it will result in an explosion.

Specifications

Product Code: EE1302

Max. Output Power: 3 W

Bluetooth Version: 2.1 + EDR

Wireless Range: 10 m

Charging Voltage: 5 V 1 A DC

Working Voltage: 3.7 V

Rechargeable Battery: 300 mAh Li-ion

Frequency Response: 200 Hz–20 kHz

Veillez lire toutes les instructions avant l'utilisation et conserver pour toute référence ultérieure.

FR

Consignes de Sécurité

Lors de l'utilisation d'appareils électriques, des précautions basiques doivent être prises.

Les enfants de plus de 8 ans et les personnes aux capacités physiques, mentales ou sensorielles réduites ou manquant d'expérience ou de connaissances peuvent utiliser cet appareil seulement si ils sont sous surveillance ou ont reçu des consignes d'utilisation et comprennent les risques encourus.

Les enfants doivent être surveillés afin de s'assurer qu'ils ne jouent pas avec l'appareil.

A moins qu'ils aient plus de 8 ans et soient surveillés, les enfants ne doivent pas procéder au nettoyage ou à l'entretien de l'appareil. Ce produit n'est pas un jouet.

Cet appareil ne contient aucune pièce réparable par l'utilisateur. Si l'appareil ou un de ses accessoires est défectueux ou a été endommagé ou échappé, seul un électricien qualifié doit procéder aux réparations.

Des réparations non conformes mettent en danger l'utilisateur.

Gardez l'appareil et le câble USB hors de portée des enfants.

Gardez l'appareil et le câble USB à l'abri de la chaleur et de bords coupants qui pourraient l'endommager.

Gardez l'appareil à l'abri des sources de chaleur, de la lumière directe du soleil, de l'humidité et de tout autre liquide.

Gardez le câble USB à l'écart de toute autre partie de l'appareil susceptible de chauffer pendant l'utilisation.

Gardez l'appareil à l'abri de la poussière, des peluches, etc.

Ne plongez pas l'appareil dans l'eau ou tout autre liquide.

N'utilisez pas l'appareil avec les mains mouillées.

N'utilisez pas l'appareil s'il a été exposé à l'eau, moisissures ou tout autre liquide, ceci afin d'éviter tout choc électrique, explosion et/ou blessure et dommage à l'appareil.

Warning: Keep the unit away from flammable materials.

Battery Safety

The battery unit should not be placed near excessive heat sources, such as fire.

The supply terminals are not to be short-circuited.

Exhausted batteries should be removed from the unit to avoid leakage. In the event of the battery leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of reach of children.

Avoid storing in direct sunlight.

Do not dispose of the battery unit in a fire.

Do not crush, puncture, dismantle or otherwise damage the battery.

Do not store above 60 °C.

Do not expose batteries to heat or fire as they may explode.

Do not subject the battery (batteries) to mechanical shock.

Do not dispose of the exhausted battery in your household waste.

To dispose of the exhausted battery, take it to your local recycling station.

Contact your local government offices for further details.

This unit is fitted with a 300 mAh Li-ion rechargeable battery (non-removable).

UP Global Sourcing UK Ltd. Hereby declares that this unit is in compliance with the essential requirements and other provisions of directive 1999/5/EC.

Getting Started

Remove the unit from the box.

Remove any packaging from the unit.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Mini Capsule Speaker

USB Charging Cable

Line-In Aux. Cable

Instruction Manual

Features

Bluetooth Version: 2.1 + EDR

Wireless Range: 10 m

Speaker Output: 3 W

Built-in Rechargeable Battery

Power Supply: 5 V 1 A DC

Charging Cable (Included)

Line-in Aux. Cable (Included)

Built-in Hands-free Microphone

Ne laissez pas l'appareil sans surveillance lorsqu'il est connecté à un autre appareil.

N'utilisez pas l'appareil à d'autres fins que celles pour lesquelles il a été conçu.

Utilisez uniquement les accessoires fournis avec l'appareil.

N'utilisez pas cet appareil à l'extérieur.

Ne rangez pas cet appareil à la lumière directe du soleil ou dans des conditions élevées d'humidité.

N'insérez aucun objet dans les ouvertures.

Ne jouez pas de musique à des niveaux excessifs, ce qui pourrait endommager votre oreille ou appareil.

Il est impératif de débrancher le câble USB après utilisation, avant son nettoyage ou pendant sa réparation.

Cet appareil doit être placé sur une surface stable résistant à la chaleur. Cet appareil est à usage domestique uniquement. Il ne doit pas être utilisé à des fins commerciales.

Afin d'éviter tout risque auditif, n'écoutez pas de musique à des niveaux élevés sur une période prolongée.

Attention : tenez l'appareil à l'écart de matériaux inflammables.

Sécurité de la Batterie

La batterie ne doit pas être placée proche de sources de chaleur excessives, telles que du feu.

Les bornes d'alimentation ne doivent pas être court-circuitées.

Les batteries vides doivent être retirées de l'appareil pour éviter toute fuite. En cas de fuite de la batterie, ne laissez aucun liquide entrer en contact avec la peau ou les yeux.

En cas de contact, nettoyez la zone affectée à grande eau et demandez conseil à votre médecin.

Gardez les batteries hors de portée des enfants.

Ne rangez pas cet appareil à la lumière directe du soleil.

Ne jetez pas la batterie dans du feu.

N'essayez pas d'écraser, percer, démonter ou endommager la batterie.

Ne conservez pas à des températures supérieures à 60 °C.

N'exposez pas la batterie à la chaleur ou à du feu sous risque d'explosion.

Ne soumettez pas la batterie à un choc mécanique.

Ne jetez pas la batterie avec vos ordures ménagères.

Pour vous débarrasser de votre batterie vide, apportez-la à votre centre de recyclage. Contactez vos autorités locales pour plus d'informations.

Cet appareil contient une batterie rechargeable Li-ion de 300 mAh (non-amovible).

UP Global Sourcing UK Ltd. Déclare par la présente que cet appareil est conforme aux réglementations et à toutes les dispositions pertinentes de la Directive 1999/5/EC.

Instructions for Use Charging the Battery

The Mini Capsule Speaker is fitted with a 300 mAh Li-ion battery. It is recommended that the battery be charged fully before first use; this will take approximately 2 hours.

Connect the micro USB end of the USB charging cable into the 5 V 1 A DC charging port on the back of the Mini Capsule Speaker and the other end to a compatible USB port.

Whilst charging, the LED indicator light will illuminate red. Once the battery has charged fully, the LED indicator light will switch off.

Once the Mini Capsule Speaker is fully charged, carefully disconnect both ends of the USB charging cable and store it safely for future use.

Using the Mini Capsule Speaker Basic Functionality

Turn on the Mini Capsule Speaker by flicking the 'On/Off' switch to the 'On' position.

Flick the 'On/Off' switch to the 'Off' position to turn off the Mini Capsule Speaker.

Modes

Ensure that the Mini Capsule Speaker is turned on before using any of the following modes.

Bluetooth Mode

Using the Bluetooth mode allows sound from a Bluetooth compatible device to be played wirelessly through the Mini Capsule Speaker.

It can also be used to make the Mini Capsule Speaker a hands-free device for making phone calls when on the go.

To use Bluetooth mode, the Bluetooth compatible device must first be paired with the Mini Capsule Speaker.

Pairing with a Bluetooth Compatible Device

STEP 1: Turn on the Mini Capsule Speaker by flicking the 'On/Off' switch to the 'On' position. The LED indicator light will flash blue in quick bursts, indicating that the Mini Capsule Speaker is ready to be paired with a Bluetooth compatible device.

STEP 2: Search for the Mini Capsule Speaker using a Bluetooth compatible device. Select 'EE1302' to connect and pair to it.

STEP 3: Once a connection has been made, the LED indicator light will flash blue in slow bursts to indicate that the Mini Capsule Speaker is now paired with the Bluetooth compatible device.

CD05012019/MD14012015/3/V3

MADE IN CHINA.
www.intempo.com
Victoria Street, Manchester M19 0DD, UK



intempo

