


## Description of Parts

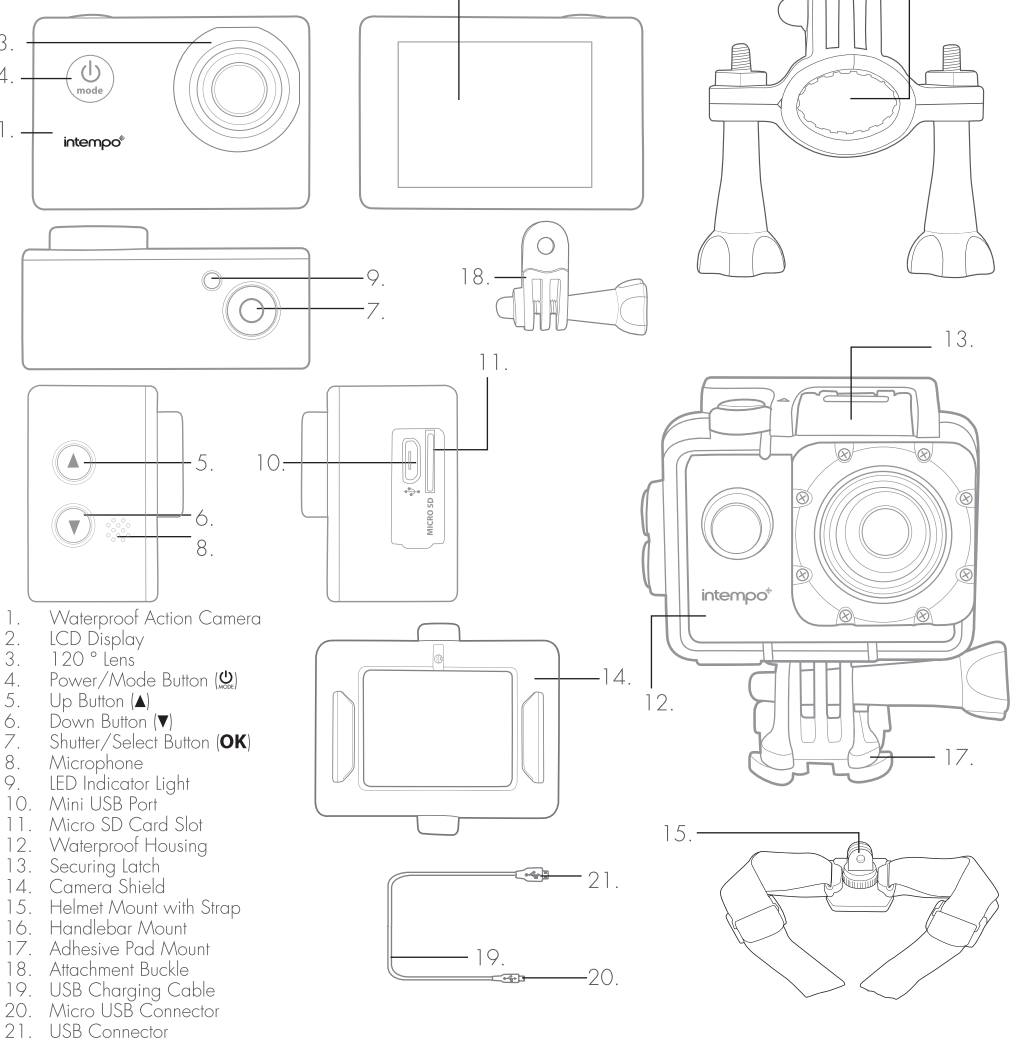

1. Waterproof Action Camera  
2. LCD Display  
3. 120° Lens  
4. Power/Mode Button  
5. Up Button  
6. Down Button  
7. Shutter/Select Button  
8. Microphone  
9. LED Indicator Light  
10. Mini USB Port  
11. Micro SD Card Slot  
12. Waterproof Housing  
13. Securing Latch  
14. Camera Shield  
15. Helmet Mount with Strap  
16. Handlebar Mount  
17. Adhesive Pad Mount  
18. Attachment Buckle  
19. USB Charging Cable  
20. Micro USB Connector  
21. USB Connector

STEP 4: Open the DCIM folder and then select the 100MEDIA folder. All media files will be in this folder.  
STEP 5: Select the required media files and transfer them to a folder on the PC.  
STEP 6: Go into 'My Computer', right click on MICROSD and then click eject from the drop-down menu.  
STEP 7: Carefully disconnect both ends of the USB charging cable and store it safely for future use.  
**Note:** Do not disconnect the USB charging cable during loading, as this could cause damage to the camera and the media files stored on the micro SD card.

### Troubleshooting

Problem	Solution
The camera will not turn on.	Check that the camera is fully charged.
The camera will not take photos or record videos.	Check that a compatible micro SD card is inserted correctly and formatted before first use.
Photos and videos cannot be deleted.	Check if the files are protected; unlock and try again.

### Specifications

Product Code: EE2233  
Power Supply: 5 V 1 A  
Video Output: 50/60 Hz  
Waterproof Depth: 30 m  
HD Video Resolution: 720 Pixels

Veillez lire attentivement toutes les instructions et les conserver pour référence ultérieure.

### Consignes de Sécurité

Lors de l'utilisation d'appareils électriques, des précautions de sécurité basiques doivent être respectées en permanence.

Les enfants de 8 ans et plus, ainsi que les personnes aux capacités physiques, sensorielles ou mentales réduites, ou qui manquent d'expérience et de connaissances peuvent utiliser cet appareil uniquement s'ils sont surveillés ou ont reçu des instructions concernant l'utilisation en toute sécurité de l'appareil et s'ils comprennent les risques associés. Les enfants doivent être surveillés afin de veiller à ce qu'ils ne jouent pas avec l'appareil. À moins qu'ils ne soient âgés de plus de 8 ans et qu'ils ne soient supervisés, les enfants ne doivent pas effectuer les tâches de nettoyage ou d'entretien.

Cet appareil n'est pas un jouet.  
Cet appareil ne contient aucune pièce réparable par l'utilisateur. Si le port USB, la prise ou toute autre partie de l'appareil ne fonctionne pas correctement, ou si l'appareil est tombé ou est endommagé, les réparations doivent impérativement être effectuées par un électricien qualifié. En cas de réparations incorrectes, l'utilisateur s'expose à des risques.

Tenir l'appareil et le câble USB hors de portée des enfants.  
Tenir l'appareil et le câble USB à l'écart de la chaleur ou de bords tranchants susceptibles de les endommager.  
Tenir l'appareil à l'écart des sources de chaleur, des rayons directs du soleil, de l'humidité, de l'eau et de tout autre liquide.

Tenir le câble USB à l'écart de toute partie de l'appareil susceptible de chauffer pendant l'utilisation.  
Garder l'appareil à l'abri de la poussière, des peluches, des cheveux ou de tout ce qui peut réduire la circulation d'air de l'appareil.

Ne pas plonger l'appareil dans l'eau ou tout autre liquide, sans le boîtier étanche entièrement sécurisé.  
Ne pas faire fonctionner l'appareil avec les mains mouillées, sans le boîtier étanche entièrement sécurisé.

Ne pas faire fonctionner l'appareil s'il a été exposé à l'eau, à l'humidité ou à un autre liquide pour éviter tout risque d'électrocution, d'explosion et/ou de blessures pour l'utilisateur ou de dommages pour l'appareil.  
Pour réduire les risques d'incendies ou d'électrocution, ne pas exposer cet appareil à des gouttes ou des éclaboussures, et ne pas poser des objets remplis de liquide, comme des vases, sur l'appareil, sans le boîtier étanche entièrement sécurisé.  
Ne pas laisser des objets sensibles au magnétisme (cartes de paiement, disquettes avec code magnétique, etc.) à proximité de l'appareil.

Ne pas laisser le produit dans un endroit à proximité de sources de chaleur, exposé aux rayons directs du soleil, à une poussière excessive, à l'humidité, à la pluie ou à des chocs mécaniques, ou dans une voiture dont les vitres sont fermées.

Please read all of the instructions carefully and retain for future reference.

### Safety Instructions

When using electrical products, basic safety precautions should always be followed. Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the product. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This product is not a toy.  
This product contains no user serviceable parts. If the USB, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.  
Keep the product and USB cable out of the reach of children.  
Keep the product and USB cable away from heat or sharp edges that could cause damage.  
Keep the product away from heat sources, direct sunlight, humidity, water and any other liquid.

Do not leave the USB cable away from any parts of the product that may become hot during use. Keep the product free from dust, lint, hair or anything that may reduce the airflow of the product.

Do not immerse the product in water or any other liquid without the waterproof housing fully secured.  
Do not operate the product with wet hands without the waterproof housing fully secured.  
Do not operate the product if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the product. To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing, and do not place objects filled with liquid, such as vases, onto the product without the waterproof housing fully secured.

Do not leave any objects susceptible to magnetism (cash cards, floppy disks with magnetic coding, etc.) near the product.  
Do not leave the product in a location near heat sources, in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock, or in a car with its windows closed.  
Do not touch any sections of the product that may become hot.  
Do not leave the product unattended whilst connected to another device.  
Do not use the product for anything other than its intended use.  
Do not use any accessories other than those supplied.  
Do not put objects into any of the openings.

Always unplug the product after use and before any cleaning or maintenance.

This product is intended for domestic use only. It should not be used for commercial purposes.  
**Warning:** Keep the product and USB away from flammable materials.

### Battery Safety

If batteries become exhausted, they should be removed from the product to avoid leakage. In the event of any batteries leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.  
Keep batteries out of the reach of children.  
Secondary batteries need to be charged before use.  
After extended periods of storage, it may be necessary to charge and discharge the batteries several times to obtain maximum performance.  
Do not leave batteries on charge for prolonged periods of time.

Do not use any charger other than that specifically provided for use with the product. The supply terminals are not to be short-circuited.

Do not store batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects.  
Do not store above 60 °C. Avoid storing in direct sunlight.  
Do not use any batteries that are not designed for use with the product.  
Do not dispose of batteries in a fire.

Do not crush, puncture, dismantle or otherwise damage batteries.  
Do not dismantle, open or shred secondary batteries.  
Do not expose batteries to heat or fire as they may explode.  
Do not subject batteries to mechanical shock.

Do not dispose of exhausted batteries in household waste.

Ne pas toucher une partie de l'appareil susceptible de chauffer.  
Ne pas laisser l'appareil sans surveillance lorsqu'il est branché à un autre périphérique.  
Ne pas utiliser l'appareil à d'autres fins que celles prévues.  
N'utiliser que les accessoires fournis.  
Ne pas glisser des objets dans les ouvertures.  
Toujours débrancher l'appareil après utilisation ou avant un nettoyage ou un entretien.  
Cet appareil est destiné à un usage domestique uniquement. Il ne doit pas être utilisé à des fins commerciales.  
**Avertissement :** Tenir l'appareil et le câble USB à l'écart de matériaux inflammables.

### Sécurité des Piles

Les piles usagées doivent être retirées de l'appareil pour éviter les fuites.  
En cas de fuite des piles, éviter tout contact entre le liquide et la peau ou les yeux.  
En cas de contact, rincer abondamment à l'eau et consulter un médecin.  
Garder les piles hors de portée des enfants.  
Les piles secondaires doivent être chargées avant l'utilisation. Après les périodes de stockage prolongées, il peut être nécessaire de charger et de décharger les piles plusieurs fois pour une performance optimale.

Ne pas laisser les piles en charge pendant des périodes prolongées.  
Ne pas utiliser un chargeur autre que celui spécifiquement fourni avec l'appareil. Les bornes des piles ne doivent pas être mises en court-circuit.  
Ne pas stocker les piles en vrac dans une boîte ou un tiroir car elles risquent d'entrer en court-circuit entre elles ou avec d'autres objets métalliques.

Ne pas stocker à une température supérieure à 60 °C. Éviter toute exposition aux rayons directs du soleil pendant le stockage.  
Ne pas utiliser des piles qui ne sont pas destinées à être utilisées avec cet appareil.  
Ne pas jeter les piles usagées au feu.

Ne pas écraser, percer, démonter ou endommager de toute autre manière les piles.  
Ne pas démonter, ouvrir ou brayer les piles secondaires.  
Ne pas exposer les piles à la chaleur ou au feu, car elles peuvent exploser.  
Ne pas soumettre les piles à un choc mécanique.  
Ne pas jeter les piles usagées avec les ordures ménagères.

Déposer les piles dans un centre de recyclage. Se renseigner auprès des collectivités locales pour plus d'informations sur le recyclage.

Cet appareil est équipé d'une pile rechargeable Li-Ion 900 mAh (fixe).

### Nettoyage et Entretien

Essuyer la caméra avec un chiffon doux, humide et sans peluche, et laisser soigneusement sécher.

### À ne pas faire :

Plonger la caméra dans l'eau ou tout autre liquide, sans le boîtier étanche entièrement sécurisé.  
Exposer la caméra à des liquides ou à l'humidité, sans le boîtier étanche entièrement sécurisé pour éviter que les circuits internes de l'appareil ne soient endommagés.

Utiliser des solvants de nettoyage abrasifs qui pourraient endommager la caméra.  
Exposer la caméra à des objets tranchants qui pourraient l'endommager.  
Exposer la caméra à des températures très élevées ou très basses qui raccourciraient la durée de vie des dispositifs électroniques, détruiraient la pile ou déformeraient certaines pièces en plastique.

Faire tomber la caméra au risque d'endommager le circuit interne.

Tenter de démonter la caméra au risque de l'endommager.

Jeter la caméra dans un feu au risque de la faire exploser.

### Pour Commencer

Retirer l'appareil de la boîte. Retirer tous les emballages du produit.

Placer les emballages dans la boîte, ranger collecti ou le jeter de manière sécurisée.

### Dans la Boîte

Caméra Sport Étanche Support pour Guidon  
Câble de Charge USB Support Adhésif  
Boîtier Étanche Boucle de Fixation  
Coque de la Caméra Bandes Adhésives  
Support pour Casque avec Sangle

### Instructions pour Utiliser/Charger la Pile

La caméra est équipée d'une pile Li-Ion de 900 mAh rechargeable. Il est conseillé de charger entièrement la pile avant la première utilisation ; cette opération prend environ 3–5 heures.

Brancher l'extrémité micro USB du câble de charge USB au port de charge mini USB situé

à disposition de any batteries, take them to a local recycling station. Contact the local government offices for further details.

This product is fitted with a 900 mAh Li-Ion rechargeable battery (non-removable).

### Care and Maintenance

Wipe the camera with a soft, damp, lintfree cloth and allow to dry thoroughly.

**Do not:**

Immerse the camera in water or any other liquid without the waterproof housing fully secured.

Expose the camera to liquid, moisture or humidity without the waterproof housing fully secured to avoid the product's internal circuit being affected.

Use any abrasive cleaning solvents to clean the camera, as this can cause damage.

Expose the camera to sharp objects, which may cause damage.  
Expose the camera to extremely high or low temperatures as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.

Drop the camera, as the internal circuit may become damaged.

Attempt to disassemble the camera, as this may cause damage to the product.

Dispose of the camera in a fire, as it will result in an explosion.

### Getting Started

Remove the product from the box. Remove any packaging from the product. Place the packaging inside the box and either store or dispose of safely.

### In the Box

Waterproof Action Camera Handlebar Mount  
USB Charging Cable Adhesive Pad Mount  
Waterproof Housing Attachment Buckle  
Camera Shield Adhesive Strips  
Helmet Mount with Strap

### Instructions for Use Charging the Battery

The camera is fitted with a 900 mAh Li-Ion battery. It is recommended that the battery is fully charged before first use; this will take approx. 3–5 hours.

Connect the micro USB end of the USB charging cable into the mini USB charging port on the side of the camera and the other end to a compatible USB port.

Whilst charging, the LED indicator light will illuminate red. Once the battery has fully charged, the LED indicator light will switch off.

Carefully disconnect both ends of the USB charging cable and store it safely for future use.  
Do not use any accessories other than those supplied.

**Warning:** Do not attempt to charge the camera with any cable other than the one provided. Do not leave the camera unattended whilst charging.

### Assembling the Waterproof Action Camera

The camera must have either the waterproof case or camera shield fitted to be able to secure it to the attachment buckle.

### Camera Shield

The camera comes with a camera shield for added durability. Insert the camera into the camera shield with the lens facing forwards. The **Q** and **OK** buttons should be positioned at the top; the mounting point on the camera shield should be at the bottom.

### Waterproof Housing

The camera comes with a waterproof case for underwater action and added durability.

**STEP 1:** Open the latch on the side of the waterproof case by simultaneously pushing the arrow at the centre of the latch to the right and the arrow at the bottom of the latch upwards.

**STEP 2:** Insert the camera into the waterproof case, with the lens facing forwards.

The **Q** and **OK** buttons should be positioned at the top.

**STEP 3:** Close the waterproof case door and secure the latch.

**Note:** Check that the latch is secure and that all seals are in position. The camera settings cannot be adjusted whilst it is in the waterproof case.

### Handlebar Mount

**STEP 1:** Slide the attachment buckle into the slot on top of the handlebar mount.

**STEP 2:** Use a screw (included) to secure the handlebar mount and then tighten, until it is secure.

**STEP 3:** Align the bolt on the attachment buckle to the camera's mounting point and turn. When the desired position is reached, use the wheel on the bottom end of the bolt to tighten.

**STEP 4:** Pinch both sides of the attachment buckle and slide it onto the handlebar mount.

sur le côté de la caméra et brancher l'autre extrémité du câble à un port USB compatible. Pendant la charge, le voyant lumineux LED est allumé en rouge. Une fois la pile entièrement chargée, le voyant lumineux LED s'éteint.  
Débrancher avec précaution les deux extrémités du câble de charge USB et ranger celui-ci en toute sécurité pour un usage ultérieur.

**Avertissement :** Ne pas essayer de charger la caméra avec un autre câble que celui fourni. Ne pas laisser la caméra sans surveillance pendant le chargement.

### Assembler la Caméra Sport Étanche

La caméra doit être équipée du boîtier étanche ou de sa coque pour être fixée à la boucle de fixation.

### Coque de la Caméra

La caméra est fournie avec une coque pour une plus longue durée de vie. Insérer la caméra dans la coque, avec la lentille tournée vers l'avant. Les boutons **Q** et **OK** doivent être positionnés en haut ; le point de montage sur la coque de la caméra doit être en bas.

### Boîtier Étanche

La caméra est fournie avec un boîtier étanche pour une utilisation sous l'eau et une plus longue durée de vie.

**ÉTAPE 1 :** Ouvrir le verrou sur le côté du boîtier étanche en poussant la flèche au centre du verrou vers la droite et celle en bas du verrou vers le haut simultanément.

**ÉTAPE 2 :** Insérer la caméra dans le boîtier étanche, avec la lentille tournée vers l'avant. Les boutons **Q** et **OK** doivent être positionnés en haut.

**ÉTAPE 3 :** Fermer le clapet du boîtier étanche et le verrou.

**Remarque :** Vérifier que le verrou est bien fermé et que tous les joints soient en place. Il est impossible de régler les paramètres de la caméra pendant qu'elle est dans le boîtier étanche.

### Support pour Guidon

**ÉTAPE 1 :** Faire glisser la boucle de fixation dans le passant, en haut du support pour guidon.

**ÉTAPE 2 :** Utiliser une vis (fournie) pour bien fixer le support pour guidon puis serrer jusqu'à ce qu'il ne bouge plus.

**ÉTAPE 3 :** Poser l'écrou de la boucle de fixation sur le point de montage de la caméra, puis tourner. Une fois la position souhaitée atteinte, utiliser la rondelle tout en bas de l'écrou pour serrer.

**ÉTAPE 4 :** Saisir les deux côtés de la boucle de fixation et la faire glisser dans le support pour guidon.

### Support pour Casque

**ÉTAPE 1 :** Poser l'écrou de la boucle de fixation sur le point de montage de la caméra, puis tourner. Une fois la position souhaitée atteinte, utiliser la rondelle tout en bas de l'écrou pour serrer.

**ÉTAPE 2 :** Saisir les deux côtés de la boucle de fixation et la faire glisser dans le support pour casque.

**ÉTAPE 3 :** Insérer la sangle du casque dans les passants situés sur le côté du support pour casque et la fixer au support avec bande Velcro, via les trous sur la coque.

**Remarque :** Une carte micro SD (non fournie) doit être insérée dans la caméra pour prendre des photos.

### Support Adhésif

**ÉTAPE 1 :** Poser l'écrou de la boucle de fixation sur le point de montage de la caméra, puis tourner. Une fois la position souhaitée atteinte, utiliser la rondelle tout en bas de l'écrou pour serrer.

**ÉTAPE 2 :** Appliquer le support adhésif sur une surface lisse et propre, et abaisser le levier de verrouillage. Pour retirer le support adhésif, monter le levier et tirer doucement sur l'attache pour réduire la pression.

### Utiliser les Fonctions de Base de la Caméra Sport Étanche

**ÉTAPE 1 :** Allumer la caméra en appuyant sur le bouton **Q**.

**ÉTAPE 2:** Appuyer sur le bouton **Q** pour sélectionner le mode caméra, vidéo ou lecture.

**ÉTAPE 3 :** Prendre une photo en appuyant sur **OK**.

**ÉTAPE 4 :** Étendre la caméra en appuyant longuemsr sur le bouton **Q**.

**Remarque :** Une carte micro SD (non fournie) doit être insérée dans la caméra pour prendre des photos.

### Installation de la Carte Micro SD

La caméra prend en charge des cartes micro SD jusqu'à 32 Go.

**ÉTAPE 1 :** Pour installer la carte micro SD (non fournie), étendre la caméra.

**ÉTAPE 2 :** Insérer la carte micro SD dans le port dédié, avec la bande métal face à l'avant de la caméra.

### Helmet Mount

**STEP 1:** Align the bolt on the attachment buckle to the camera's mounting point and turn. When the desired position is reached, use the wheel on the bottom end of the bolt to tighten.

**STEP 2:** Pinch both sides of the attachment buckle and slide it onto the helmet mount.

**STEP 3:** Insert the helmet strap through the slots on the side of the helmet mount and attach it to the mount with hook and loop tape, through the holes on the helmet.

### Adhesive Pad Mount

**STEP 1:** Align the bolt on the attachment buckle to the camera's mounting point and turn. When the desired position is reached, use the wheel on the bottom end of the bolt to tighten.

**STEP 2:** Apply the adhesive pad mount onto a smooth, clean surface and lower the locking lever. To remove the adhesive pad mount, lift up the locking lever and gently pull the tab to release the pressure.

### Using the Waterproof Action Camera

### Basic Functionality

**STEP 1:** Turn on the camera by pressing **Q**.

**STEP 2:** Press **Q** to select camera, video or playback mode.

**STEP 3:** Capture a photo by pressing **OK**.

**STEP 4:** Turn off the camera by pressing and holding **Q**.

**Note:** A micro SD card (not included) must be inserted into the camera to be able to take photos.

### Micro SD Card Installation

The camera can support micro SD cards up to 32 GB.

**STEP 1:** To install the micro SD card (not included), shut down the camera.

**STEP 2:** Insert the micro SD card into the micro SD card slot with the metal strip facing the front of the camera.

**STEP 3:** To remove the micro SD card, gently push it into the micro SD card slot.

**Note:** Make sure that the micro SD card (not included) is correctly inserted to prevent it from being accidentally released during use.

**Warning:** Do not insert or remove the micro SD card whilst the camera is turned on, as this could cause damage to the micro SD card and the files stored on it.

### Modes

The camera must be turned on before using any of the following modes.

### Recording a Video (Video mode)

**STEP 1:** Press and hold **Q** to turn the camera on.

**STEP 2:** Access Video mode by pressing **Q**.

**STEP 3:** To begin recording, press **OK**.

**STEP 4:** Stop recording by pressing **OK**.

### Playing Back Media (Playback mode)

**STEP 1:** Press and hold **Q** to turn the camera on.

**STEP 2:** Access Playback mode by pressing **Q**.

**STEP 3:** View the files using **▲** and **▼**.

**STEP 4:** Press **OK** to playback a video.

**STEP 5:** Stop a video by pressing **OK**.

### Changing the System Settings

**STEP 1:** Press **Q** until the desired mode is selected.

**STEP 2:** Access the system settings menu for the desired mode by pressing **▼** until the list of settings are displayed.

**STEP 3:** Press **OK** to cycle through mode and system settings.

**STEP 4:** Use **▲** and **▼** to browse through the selected settings menu.

**STEP 5:** To choose the menu option, press **Q**.

Settings	Function
Sounds	A beep sound will be







**GLOBAL SOURCING**  
**THE ULTIMATE WAY**

Manchester  
OL9 0DD  
United Kingdom  
www.upgs.com









t: +44 (0) 161 627 1400

f: +44 (0) 161 628 2126

hk: +852 6681 9752

cn: +86 1 3417586804

Artworker:	Jennifer Dodd
Date:	29/5/18
Project Name:	ING182204 UPG EE2233 IM
Type of Artwork:	Instruction Leaflet
Size:	A3 Folding 1PP
Software Used:	Indesign CS6
Typefaces:	Futura

-   Cyan
-   Magenta
-   Yellow
-   Black
-   PMS
-   PMS
-   PMS
-   PMS

Artwork Version 1

**Artwork Scale 1:1**

©2018 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.